

**OPEN** Industry Standard, Flexible Architecture

**GREEN** Less Heat, Less Power Consumption

**STABLE** Robust Design, Quality Parts

Stable and  
Reliable Solution

**Server/Workstation**  
Motherboard

**SIENAD8UD2-2Q**

**SIENAD8UD-2L2Q**

**User Manual**

English



Version 1.10

Published July 2024

Copyright©2024 ASRock Rack Inc. All rights reserved.

## Copyright Notice:

No part of this documentation may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRock Rack Inc.

Products and corporate names appearing in this documentation may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

## Disclaimer:

Specifications and information contained in this documentation are furnished for informational use only and subject to change without notice, and should not be constructed as a commitment by ASRock Rack. ASRock Rack assumes no responsibility for any errors or omissions that may appear in this documentation.

With respect to the contents of this documentation, ASRock Rack does not provide warranty of any kind, either expressed or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose.

In no event shall ASRock Rack, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of data, interruption of business and the like), even if ASRock Rack has been advised of the possibility of such damages arising from any defect or error in the documentation or product.

Licensee's specific rights may vary from country to country.

## CALIFORNIA, USA ONLY

The Lithium battery adopted on this motherboard contains Perchlorate, a toxic substance controlled in Perchlorate Best Management Practices (BMP) regulations passed by the California Legislature. When you discard the Lithium battery in California, USA, please follow the related regulations in advance.

"Perchlorate Material-special handling may apply, see [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate)"

## AUSTRALIA ONLY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage caused by our goods. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If you require assistance please call ASRock Rack Tel : +886-2-55599600 ext.123 (Standard International call charges apply)



### WARNING

THIS PRODUCT CONTAINS A BUTTOON BATTERY

If swallowed, a button battery can cause serious injury or death.

Please keep batteries out of sight or reach of children

ASRock Rack's Website: [www.ASRockRack.com](http://www.ASRockRack.com)



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



ASRock Rack INC. hereby declares that this device is in compliance with the essential requirements and other relevant provisions of related Directives. Full text of EU declaration of conformity is available at: <http://www.asrockrack.com>

ASRock Rack follows the green design concept to design and manufacture our products, and makes sure that each stage of the product life cycle of ASRock Rack product is in line with global environmental regulations. In addition, ASRock Rack disclose the relevant information based on regulation requirements.

Please refer to <https://www.asrockrack.com/general/about.asp?cat=Responsibility> for information disclosure based on regulation requirements ASRock Rack is complied with:



ASRock Rack INC. hereby declares that this device is in compliance with the essential requirements and other relevant provisions of related UKCA Directives. Full text of UKCA declaration of conformity is available at: <http://www.asrockrack.com>



DO NOT throw the motherboard in municipal waste. This product has been designed to enable proper reuse of parts and recycling. This symbol of the crossed out wheeled bin indicates that the product (electrical and electronic equipment) should not be placed in municipal waste. Check local regulations for disposal of electronic products.

## Contents

<b>Chapter 1 Introduction</b>	<b>1</b>
1.1 Package Contents	1
1.2 Specifications	2
1.3 Unique Features	5
1.4 Motherboard Layout	6
1.5 Onboard LED Indicators	9
1.6 I/O Panel	11
1.7 Block Diagram	13
<b>Chapter 2 Installation</b>	<b>14</b>
2.1 Screw Holes	14
2.2 Pre-installation Precautions	15
2.3 Installing the CPU	16
2.4 Installation of Memory Modules (DIMM)	20
2.5 Expansion Slots (PCI Express Slots)	22
2.6 Onboard Headers and Connectors	23
2.7 Unit Identification purpose LED/Switch	34
2.8 Dr. Debug	35
2.9 ATX PSU / DC-IN Power Connections	41
2.10 Dual LAN and Teaming Operation Guide	42
2.11 M.2_SSD Module Installation Guide	43
<b>Chapter 3 UEFI Setup Utility</b>	<b>45</b>
3.1 Introduction	45
3.1.1 UEFI Menu Bar	45

3.1.2	Navigation Keys	46
3.2	Main Screen	47
3.2.1	Mother Board Information	48
3.2.2	Processor Information	48
3.2.3	Memory Information	49
3.3	Advanced Screen	50
3.3.1	CPU Configuration	51
3.3.2	Chipset Configuration	52
3.3.3	Storage Configuration	54
3.3.4	NVMe Configuration	55
3.3.5	ACPI Configuration	56
3.3.6	USB Configuration	57
3.3.7	Super IO Configuration	58
3.3.8	Serial Port Console Redirection	59
3.3.9	H/W Monitor	62
3.3.10	PCI Subsystem Settings	63
3.3.11	AMD CBS	64
3.3.12	AMD PBS	65
3.3.13	PSP Firmware Versions	67
3.3.14	Network Stack Configuration	68
3.3.15	Driver Health	70
3.3.16	Tls Auth Configuration	71
3.3.17	Instant Flash	72
3.4	Server Mgmt	73

3.4.1	BMC Network Configuration	75
3.4.2	DNS Configuration	77
3.4.3	System Event Log	79
3.4.4	BMC Tools	80
3.5	Event Logs	81
3.6	Security	82
3.6.1	Key Management	83
3.7	Boot Screen	87
3.7.1	CSM Parameters	89
3.8	Exit Screen	90
<b>Chapter 4 Software Support</b>		<b>91</b>
4.1	Download and Install Operating System	91
4.2	Download and Install Software Drivers	91
4.3	Contact Information	91
<b>Chapter 5 Troubleshooting</b>		<b>92</b>
5.1	Troubleshooting Procedures	92
5.2	Technical Support Procedures	94
5.3	Returning Merchandise for Service	94

# Chapter 1 Introduction

Thank you for purchasing ASRock Rack **SIENAD8UD2-2Q / SIENAD8UD-2L2Q** motherboard, a reliable motherboard produced under ASRock Rack's consistently stringent quality control. It delivers excellent performance with robust design conforming to ASRock Rack's commitment to quality and endurance.

In this manual, chapter 1 and 2 contains introduction of the motherboard and step-by-step guide to the hardware installation. Chapter 3 and 4 contains the configuration guide to BIOS setup and information of the software support.



*Because the motherboard specifications and the BIOS software might be updated, the content of this manual will be subject to change without notice. In case any modifications of this manual occur, the updated version will be available on ASRock Rack website without further notice. Find the latest memory and CPU support lists on ASRock Rack website as well. ASRock Rack's Website: [www.ASRockRack.com](http://www.ASRockRack.com)*

*About this motherboard technical support, please visit the website for specific information <http://www.asrockrack.com/support/>*

## 1.1 Package Contents

- ASRock Rack SIENAD8UD2-2Q / SIENAD8UD-2L2Q motherboard  
(Deep Micro-ATX form factor: 9.6"x10.5", 24.4cm x 26.7cm)
- Quick installation guide
- 1 x I/O shield
- 1 x MCIO X8 to 8 SATA +8P cable (63cm)
- 1 x ATX 4P to 24P power cable (8cm)
- 2 x screws for M.2 sockets
- 1 x SATA PWR 6 pin cable



*If any items are missing or appear damaged, contact the authorized dealer.*

## 1.2 Specifications

SIENAD8UD2-2Q / SIENAD8UD-2L2Q	
MB Physical Status	
Form Factor	Deep Micro-ATX
Dimension	9.6" x 10.5"(24.4cm x 26.7cm)
Processor System	
CPU	Supports AMD EPYC™ 8004 series processors
Socket	1 Socket SP6 (LGA4844)
Thermal Design Power (TDP)	70-225W
Chipset	System on Chip
System Memory	
DIMM Quantity	8 DIMM slots (1DPC/2DPC)
Type	Supports DDR5 288-pin RDIMM
Max. Capacity per DIMM	96GB (2Rx4)
Max. DIMM Frequency	4800MHz
Voltage	1.1V
Note	Memory capacity, frequency, and voltage support is to be validated
PCIe Expansion Slots (SLOT7 close to CPU)	
SLOT7	PCIe5.0/CXL1.1 x8
SLOT6	PCIe5.0/CXL1.1 x16
SLOT4	PCIe5.0/CXL1.1 x16
Other PCIe Expansion Connectors	
M.2 Slot	2 M-key (PCIe5.0 x4), supports 2280/22110 form factor
OCuLink	1 OCuLink (PCIe3.0 x4)
MCIO	2 MCIO (PCIe5.0 x8 or 8 SATA 6Gb/s) 3 MCIO (PCIe5.0 x8)
SATA/SAS Storage	
PCH Built-in Storage	<b>AMD EPYC™ 8004 (16 SATA 6Gb/s):</b> 2 MCIO
Ethernet	
Additional GbE Controller	<b>SIENAD8UD-2L2Q:</b> <b>Broadcom BCM57414:</b> 2 SFP28 (25GbE) <b>Intel i210:</b> 2 RJ45 (1GbE) <b>SIENAD8UD2-2Q:</b> <b>Broadcom BCM57502:</b> 2 SFP28 (25GbE)
Server Management	
BMC Controller	ASPEED AST2600
IPMI Dedicated GLAN	1 Realtek RTL8211F for dedicated management GLAN



Graphics	
Controller	ASPEED AST2600
VRAM	DDR4 512MB
Rear I/O	
UID Button/ LED	1 UID button w/ LED
VGA Port	1 DB15 (VGA)
USB	2 Type-A (USB3.2 Gen1)
RJ45	2 RJ45 (1GbE) ( <i>for SIENAD8UD-2L2Q only</i> ), 1 dedicated IPMI
Other Network Connector	2 SFP28 (25GbE)
Internal Connectors/Headers	
PSU Connectors	1 (4-pin, ATX PSU signal) w/ ATX 24-pin adapter cable, 3 (8-pin, ATX 12V) support 12V DC-in
Other Power Connector	1 (6-pin) for HDD power
Auxiliary Panel Header	1 (18-pin): chassis intrusion, system fault LED, LAN1/LAN2 activity LED, locate, SMBus
System Panel Header	1 (9-pin): power switch, reset switch, system power LED, HDD activity LED
NMI Button	1
Front Lan LED Header	1 ( <i>for SIENAD8UD-2L2Q only</i> )
COM Header	1
Speaker Header	1 (4-pin)
Fan Headers	6 (6-pin)
Thermal Sensor Header	1
Buzzer	1
TPM Header	1 (13-pin, SPI)
SGPIO Header	3
SMBus Header	1
PMBus Header	1
IPMB Header	1
HSBP	1
Clear CMOS	1 (contact pads)
USB3.2 (Gen1) Header	1 header (19-pin, 2 USB3.2 Gen1)
LED Indicators	
Standby Power LED	1 (5VSB)
80 Debug Port LED	1
Fan Fail LED	6

BMC Heartbeat LED	1
<b>System BIOS</b>	
Type	AMI UEFI BIOS; 256 Mb SPI Flash ROM
Features	ASRock Rack Instant Flash, ACPI 6.4 and above compliance wake up events, SMBIOS 3.5.0 and above, Plug and Play(PnP)
<b>Hardware Monitor</b>	
Temperature	CPU, MB, Card side, TR1 Temperature sensing
Fan	<ul style="list-style-type: none"> <li>- Fan Tachometer</li> <li>- Quiet Fan (Allow Chassis Fan Speed Auto-Adjust by CPU Temperature)</li> <li>- Fan Multi-Speed Control</li> </ul>
Voltage	VDDCR_CPU, VDDCR_SOC, VDDIO, VDD_18_S5, VDD_33_S5, VDD_11_S3, +3V, +5V, +12V, +BAT, +1V8SB, 3VSB, 5VSB
<b>Support OS</b>	
OS	<p>Microsoft® Windows*</p> <ul style="list-style-type: none"> <li>- Server 2019 (64bit)</li> <li>- Server 2022 (64bit)</li> </ul> <p>Linux®</p> <ul style="list-style-type: none"> <li>- RedHat Enterprise Linux Server 8.6 (64bit)/Server 9.0 (64bit)</li> <li>- SUSE SLES 15.4(64bit)</li> <li>- Ubuntu 20.04.5 (64bit)/22.04.2 (64bit)</li> </ul> <p>Hypervisor:</p> <ul style="list-style-type: none"> <li>- VMWare ESXi/ 7.0 U3i/8.0</li> </ul> <p><i>*Please refer to the website for the latest OS support list.</i></p>
<b>Environment</b>	
Operating Temperature	10°C ~ 35°C (50 - 95°F)
Non-operating Temperature	-40°C ~ 70°C (-40 - 158°F)

NOTE: Please refer to the website for the latest specifications.




This motherboard supports Wake from on Board LAN. To use this function, please make sure that the "Wake on Magic Packet from power off state" is enabled in Device Manager > Intel® Ethernet Connection > Power Management. And the "PCI Devices Power On" is enabled in UEFI SETUP UTILITY > Advanced > ACPI Configuration. After that, onboard LAN1&2 can wake up S5 under OS.



If installing Intel® LAN utility or Marvell SATA utility, this motherboard may fail Windows® Hardware Quality Lab (WHQL) certification tests. If installing the drivers only, it will pass the WHQL tests.

## 1.3 Unique Features

ASRock Rack Instant Flash is a BIOS flash utility embedded in Flash ROM. This convenient BIOS update tool allows user to update system BIOS without entering operating systems first like MS-DOS or Windows. With this utility, press the <F6> key during the POST or the <F2> key to enter into the BIOS setup menu to access ASRock Rack Instant Flash. Just launch this tool and save the new BIOS file to the USB flash drive, floppy disk or hard drive, then update the BIOS only in a few clicks without preparing an additional floppy diskette or other complicated flash utility. Please be noted that the USB flash drive or hard drive must use FAT32/16/12 file system.




No.	Description
1	IPMI LAN LED Header (IPMI_LED1) ( <i>for SIENAD8UD-2L2Q only</i> )
2	2 x 288-pin DDR5 DIMM Slots (DDR5_E1, DDR5_H1)*
3	2 x 288-pin DDR5 DIMM Slots (DDR5_F1, DDR5_H2)*
4	Micro-Fit Power Connector (ATX4PIN1)
5	ATX 12V Power Connector (ATX12V1)
6	ATX 12V Power Connector (ATX12V2)
7	ATX 12V Power Connector (ATX12V3)
8	PWM Configuration Header (PWM_CFG1)
9	Mini Cool Edge IO Connector (MCIO1)
10	Mini Cool Edge IO Connector (MCIO2)
11	2 x 288-pin DDR5 DIMM Slots (DDR5_A1, DDR5_D1)*
12	Mini Cool Edge IO Connector (MCIO3)
13	2 x 288-pin DDR5 DIMM Slots (DDR5_B1, DDR5_D2)*
14	Mini Cool Edge IO Connector (MCIO4)
15	M.2 Socket (M2_1) (Type 2280 / 22110)
16	Mini Cool Edge IO Connector (MCIO5)
17	M.2 Socket (M2_2) (Type 2280 / 22110)
18	System Fan Connector (FAN4)
19	System Fan Connector (FAN1)
20	System Fan Connector (FAN5)
21	System Fan Connector (FAN2)
22	System Fan Connector (FAN6)
23	System Fan Connector (FAN3)
24	PSU SMBus (PSU_SMB1)
25	SATA Power Connector (SATAPWR1)
26	OCuLink Connector (PCIe3.0 x4) (OCU1)
27	SATA SGPIO Connector (SATA_SGPIO3)
28	System Panel Header (PANEL1)
29	Auxiliary Panel Header (AUX_PANEL1)
30	USB 3.2 Gen1 Header (USB3_3_4)
31	Speaker Header (SPEAKER1)
32	Backplane PCI Express Hot-Plug Connector (CPU1_HSBP1)
33	SATA SGPIO Connector (SATA_SGPIO1)
34	SATA SGPIO Connector (SATA_SGPIO2)

No.	Description
35	BUZZER1
36	Intelligent Platform Management Bus Header (IPMB1)
37	BMC SMBus Header (BMC_SMB1)
38	COM Port Header (COM1)
39	Non Maskable Interrupt Button (NMI_BTN1)
40	PCI Express 5.0/CXL1.1 x16 Slot (PCIE4)
41	Thermal Sensor Header (TR1)
42	Clear CMOS Pad (CLRMOS1)
43	PCI Express 5.0/CXL1.1 x16 Slot (PCIE6)
44	PCI Express 5.0/CXL1.1 x8 Slot (PCIE7)
45	SPI TPM Header (TPM_BIOS_PH1)
46	Front LAN LED Connector (LED_LAN_3_4) <i>(for SIENAD8UD-2L2Q only)</i>
47	AMD Socket SP6 (LGA4844 ) (CPU1)
48	IPMI LAN LED Header (IPMI_LED1) <i>(for SIENAD8UD2-2Q only)</i>

*\*For DIMM installation and configuration instructions, please see p.19 (Installation of Memory Modules (DIMM)) for more details.*

## 1.5 Onboard LED Indicators


The layout below is only for SIENAD8UD-2L2Q reference, all SIENAD8UD Series LED locations are the same.

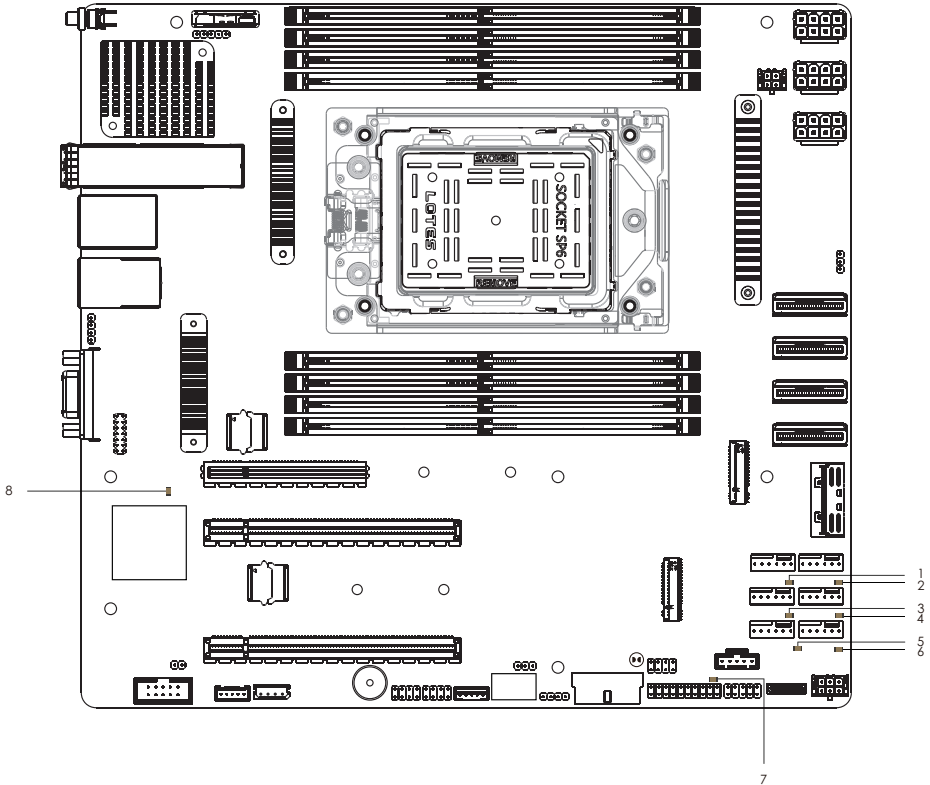

No.	Item	Status	Description
1	FAN_LED1	Red	FAN1 failed
2	FAN_LED4	Red	FAN4 failed
3	FAN_LED2	Red	FAN2 failed
4	FAN_LED5	Red	FAN5 failed
5	FAN_LED3	Red	FAN3 failed
6	FAN_LED6	Red	FAN6 failed
7	SB_PWR1	Green	STB PWR ready
8	BMC_LED1	Green	BMC heartbeat LED



## 1.6 I/O Panel

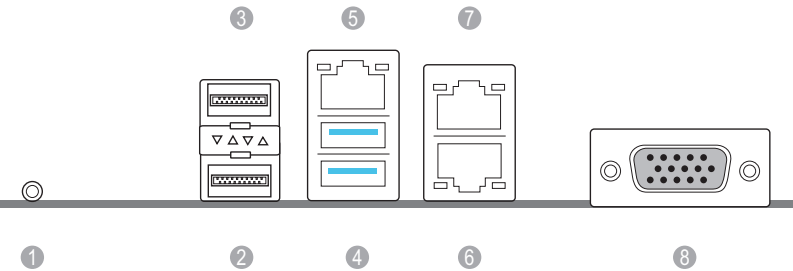


No.	Description	No.	Description
1	UID Switch (UID1)	5	LAN RJ-45 Port (IPMI_LAN)*
2	25G SFP28 (Fiber) (SFP1)***	6	1G LAN RJ-45 Port (LAN1, shared NIC)**
3	25G SFP28 (Fiber) (SFP2)***	7	1G LAN RJ-45 Port (LAN2)**
4	USB 3.2 Gen1 Ports (USB3_1_2)	8	VGA Port (VGA1)

Note: LAN1 and LAN2 are for SIENAD8UD-2L2Q only.

### LAN Port LED Indications


\*There is an LED on each side of IPMI LAN port. Please refer to the table below for the LAN port LED indications.



### IPMI LAN Port LED Indications

Activity / Link LED		Speed LED	
Status	Description	Status	Description
Off	No Link	Off	10Mbps connection or no link
Blinking Yellow	Data Activity	Orange	100Mbps connection
On	Link	Green	1Gbps connection


\*\*There is an LED on each side of the 1G LAN port. Please refer to the table below for the LAN port LED indications.



**1G LAN Port LED Indications** (for SIENAD8UD-2L2Q only)

Activity / Link LED		Speed LED	
Status	Description	Status	Description
Off	No Link	Off	10Mbps connection or no link
Blinking Yellow	Data Activity	Orange	100M connection
On	Link	Green	1Gbps connection


\*\*\*There is an LED on each side of the SFP LAN port. Please refer to the table below for the LAN port LED indications.



**SFP LAN Port LED Indications**

Activity / Link LED		Speed LED	
Status	Description	Status	Description
Off	No Link	Off	1G/100Mbps connection or no link
Blinking Orange	Data Activity	Orange	10Gbps connection
On	Link	Green	25Gbps connection

## 1.7 Block Diagram

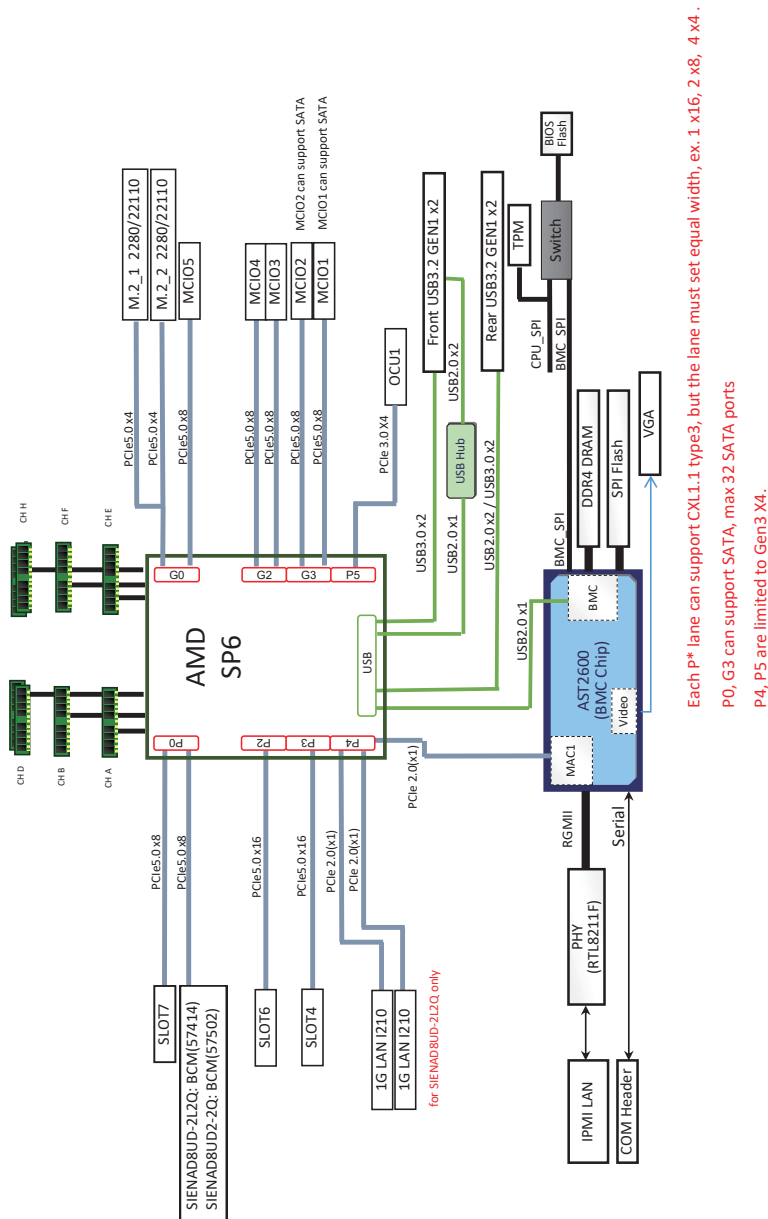

# Chapter 2 Installation

This is a Deep Micro-ATX form factor (9.6" x10.5", 24.4cm x 26.7cm) motherboard. Before installing the motherboard, study the configuration of the chassis to ensure that the motherboard fits into it.




*Make sure to unplug the power cord before installing or removing the motherboard. Failure to do so may cause physical injuries and motherboard damages.*

## 2.1 Screw Holes

Place screws into the holes indicated by circles to secure the motherboard to the chassis.



*Attention! Before installing this motherboard, be sure to unscrew and remove the standoff at the marked location, under the motherboard, from the chassis, in order to avoid electrical short circuit and motherboard damages.*

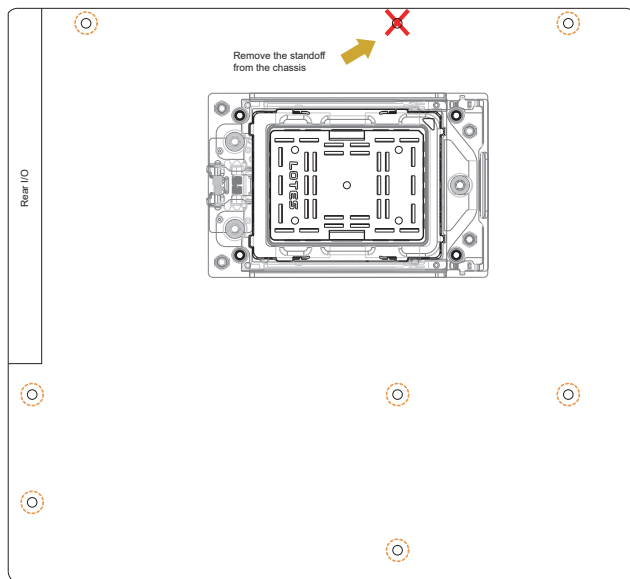

*Do not over-tighten the screws! Doing so may damage the motherboard.*

## 2.2 Pre-installation Precautions

Take note of the following precautions before installing motherboard components or change any motherboard settings.

1. Unplug the power cord from the wall socket before touching any components.
2. To avoid damaging the motherboard's components due to static electricity, NEVER place the motherboard directly on the carpet or the like. Also remember to use a grounded wrist strap or touch a safety grounded object before handling the components.
3. Hold components by the edges and do not touch the ICs.
4. Whenever uninstall any component, place it on a grounded anti-static pad or in the bag that comes with the component.
5. When placing screws into the screw holes to secure the motherboard to the chassis, please do not over-tighten the screws! Doing so may damage the motherboard.





*Before installing or removing any component, ensure that the power is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, and/or components.*


## 2.3 Installing the CPU




1. Before inserting the CPU into the socket, please check if the PnP cap is on the socket, if the CPU surface is unclean, or if there are any bent pins in the socket. Do not force to insert the CPU into the socket if above situation is found. Otherwise, the CPU will be seriously damaged.
2. Unplug all power cables before installing the CPU.

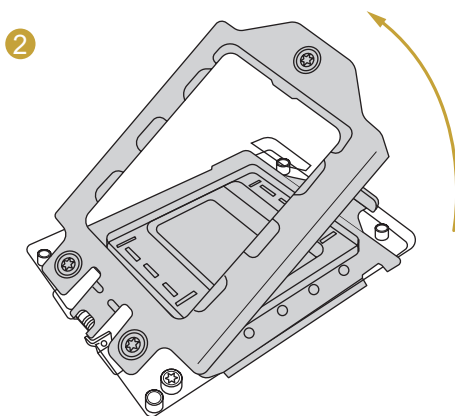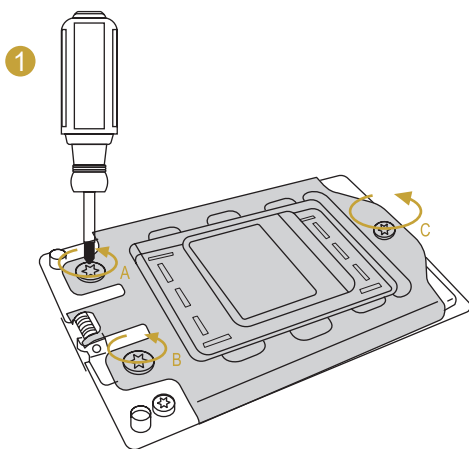


3

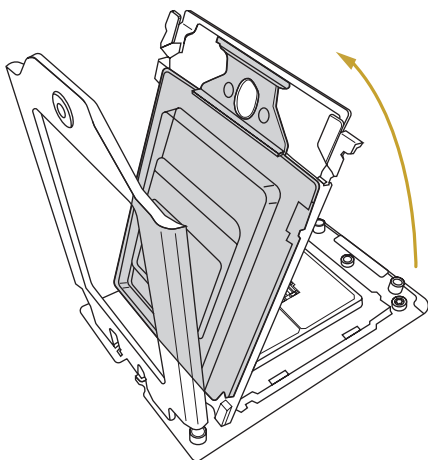

4

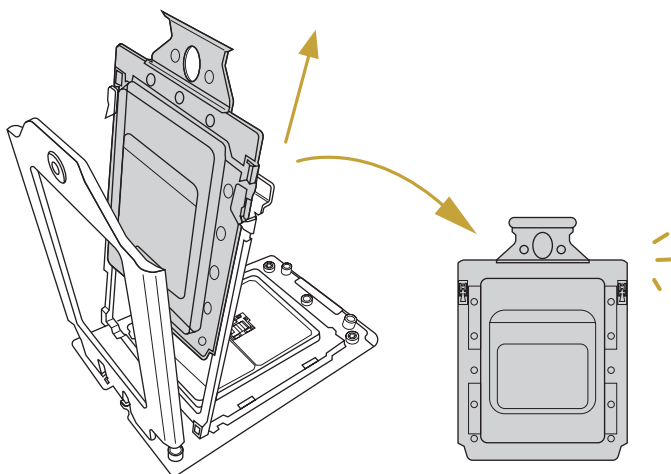

5

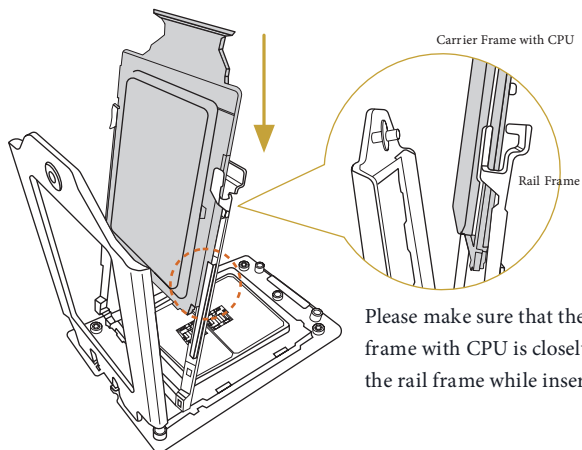


Please make sure that the carrier frame with CPU is closely attached to the rail frame while inserting it.




Install the carrier frame with CPU. Don't separate them.

6

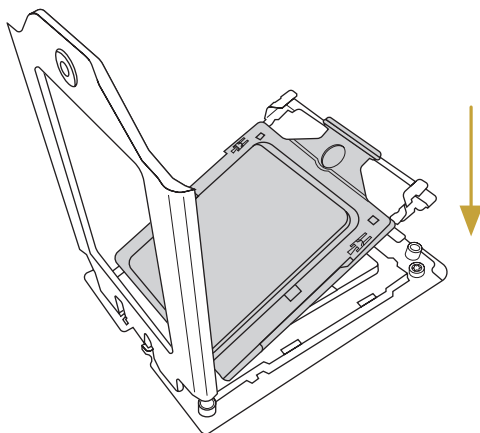




7

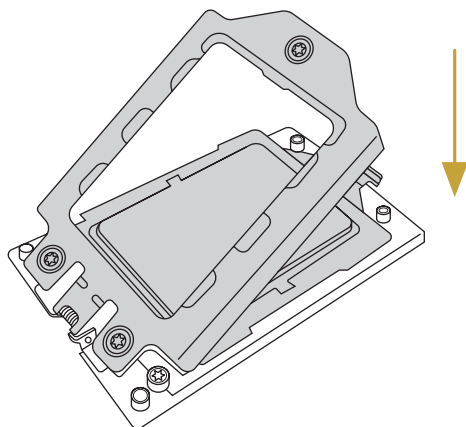

8

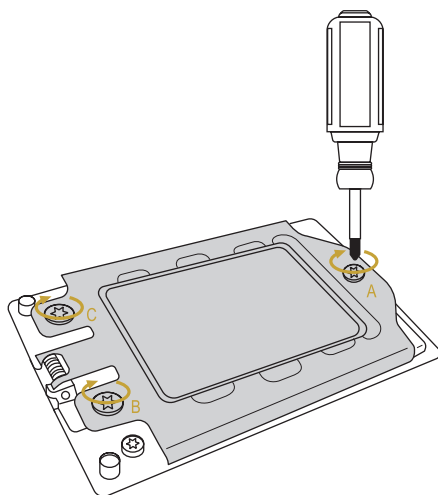


## 2.4 Installation of Memory Modules (DIMM)

This motherboard provides eight 288-pin DDR5 (Double Data Rate 5) DIMM slots in two groups, and supports Single Channel Memory Technology.


DIMM Count	1	2	4	6	8
Channel Count	1	2	4	6	6
H2			V	V	V
H1					V
F1				V	V
E1		V	V	V	V
<b>DIMM Channel</b>					
<b>CPU1</b>					
A1	V	V	V	V	V
B1				V	V
D1					V
D2			V	V	V

The Symbol V indicates the slot is populated.

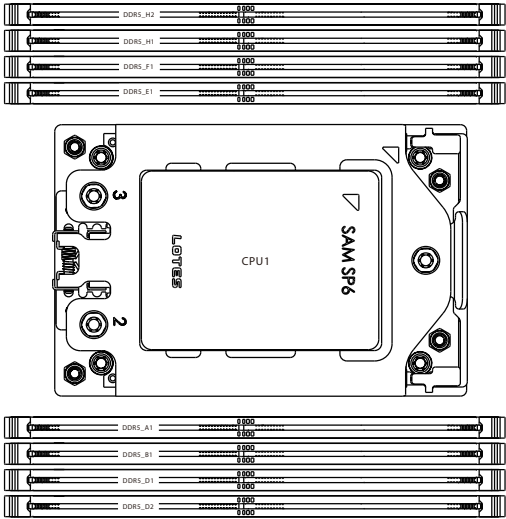


1. It is not allowed to install a DDR, DDR2, DDR3 or DDR4 memory module into a DDR5 slot; otherwise, this motherboard and DIMM may be damaged.
2. For dual channel configuration, it needs to install identical (the same brand, speed, size and chip-type) DDR5 DIMM pairs.
3. It is unable to activate Dual Channel Memory Technology with singular memory installed.


1

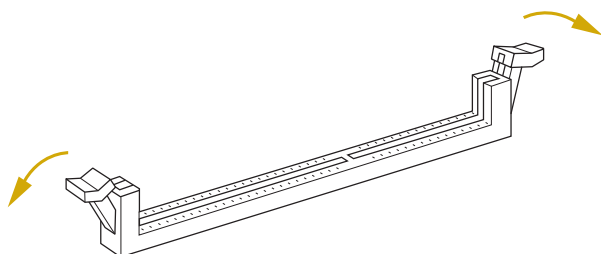

2

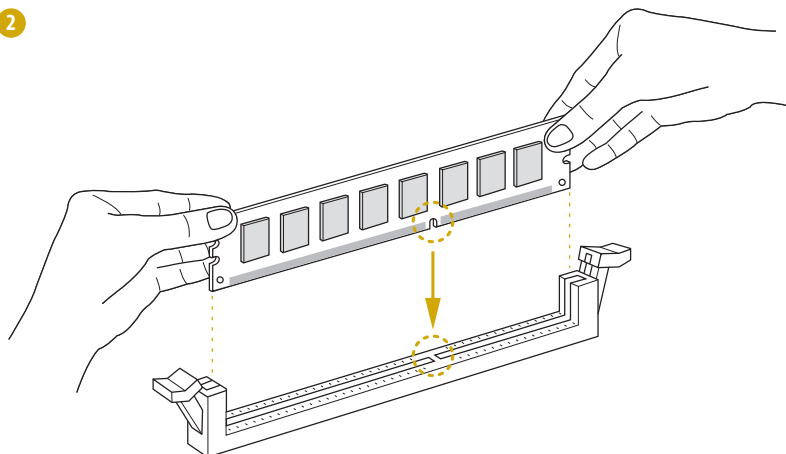

3

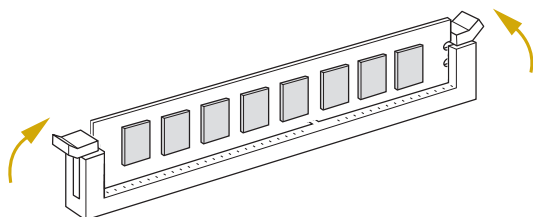

## 2.5 Expansion Slots (PCI Express Slots)

There are 3 PCI Express slots on this motherboard.

### PCIe slots:

PCIe4 (PCIe 5.0 x16 slot, from CPU) is used for PCI Express x16 lane width cards.

PCIe6 (PCIe 5.0 x16 slot, from CPU) is used for PCI Express x16 lane width cards.

PCIe7 (PCIe 5.0 x8 slot, from CPU) is used for PCI Express x8 lane width cards.

Slot	Generation	Mechanical	Electrical	Source
PCIe4	5.0	x16	x16	CPU1
PCIe6	5.0	x16	x16	CPU1
PCIe7	5.0	x8	x8	CPU1

### Installing an expansion card


- Step 1. Before installing an expansion card, please make sure that the power supply is switched off or the power cord is unplugged. Please read the documentation of the expansion card and make necessary hardware settings for the card before starting the installation.
- Step 2. Remove the system unit cover (if the motherboard is already installed in a chassis).
- Step 3. Remove the bracket facing the slot that intending to use on the chassis. Keep the screw for later use.
- Step 4. Install the PCIe card to the riser card.
- Step 5. Align the riser-card assembly connector with the slot on the system board. Press firmly until the riser-card assembly is completely seated on the slot.
- Step 6. Fasten the card to the chassis with the screw.
- Step 7. Replace the system cover.

## 2.6 Onboard Headers and Connectors



Onboard headers and connectors are NOT jumpers. Do NOT place jumper caps over these headers and connectors. Placing jumper caps over the headers and connectors will cause permanent damage to the motherboard.

**System Panel Header**  
(9-pin PANEL1)  
(see p.6, No. 28)

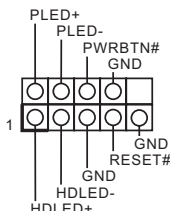

Connect the power switch, reset switch and system status indicator on the chassis to this header according to the pin assignments. Particularly note the positive and negative pins before connecting the cables.



**PWRBTN (Power Switch):**

Connect to the power switch on the chassis front panel and configure the way to turn off the system using the power switch.

**RESET (Reset Switch):**

Connect to the reset switch on the chassis front panel. Press the reset switch to restart the computer if the computer freezes and fails to perform a normal restart.

**PLED (System Power LED):**


Connect to the power status indicator on the chassis front panel. The LED is on when the system is operating. The LED is off when the system is in S4 sleep state or powered off (S5).

**HDLED (Hard Drive Activity LED):**

Connect to the hard drive activity LED on the chassis front panel. The LED is on when the hard drive is reading or writing data.


The front panel design may differ by chassis. A front panel module mainly consists of power switch, reset switch, power LED, hard drive activity LED, speaker and etc. When connecting the chassis front panel module to this header, make sure the wire assignments and the pin assignments are matched correctly.

**Thermal Sensor Header**  
(3-pin TR1)  
(see p.6, No. 41)



Please connect the thermal sensor cable to either pin 1-2 or pin 2-3 and the other end to the device for monitor its temperature.

## Auxiliary Panel Header (18-pin AUX PANEL1) (see p.6, No. 29)

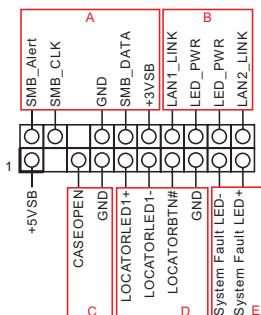

This header supports multiple functions on the front panel, including the front panel SMB, internet status indicator and chassis intrusion pin.



### A. Front panel SMBus connecting pin (6-1 pin FPSMB)

This header allows user to connect SMBus (System Management Bus) equipment. It can be used for communication between peripheral equipment in the system, which has slower transmission rates, and power management equipment.

### B. Internet status indicator (2-pin LAN1\_LED, LAN2\_LED)

These two 2-pin headers allow user to use the Gigabit internet indicator cable to connect to the LAN status indicator. When this indicator flickers, it means that the internet is properly connected.

### C. Chassis intrusion pin (2-pin CHASSIS)

This header is provided for host computer chassis with chassis intrusion detection designs. In addition, it must also work with external detection equipment, such as a chassis intrusion detection sensor or a microswitch. When this function is activated, if any chassis component movement occurs, the sensor will immediately detect it and send a signal to this header, and the system will then record this chassis intrusion event. The default setting is set to the CASEOPEN and GND pin; this function is off.


### D. Locator LED (4-pin LOCATOR)

This header is for the locator switch and LED on the front panel.

### E. System Fault LED (2-pin LOCATOR)

This header is for the Fault LED on the system.

## Chassis Speaker Header (4-pin SPEAKER1) (see p.6, No. 31)




Please connect the chassis speaker to this header.

## Non Maskable Interrupt Button Header (NMI\_BTN1) (see p.6, No. 39)




Please connect a NMI device to this header.

USB 3.2 Gen1 Header  
(19-pin USB3\_3\_4)  
(see p.6, No. 30)

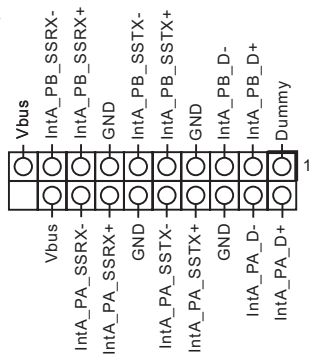


Besides two default USB 3.2 Gen1 ports on the I/O panel, there is one USB 3.2 Gen1 header on this motherboard. This USB 3.2 Gen1 header can support two USB 3.2 Gen1 ports.

SPI TPM Header  
(13-pin TPM\_BIOS\_PH1)  
(see p.6, No. 45)

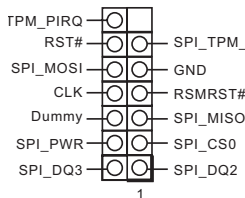


This connector supports SPI Trusted Platform Module (TPM) system, which can securely store keys, digital certificates, passwords, and data. A TPM system also helps enhance network security, protects digital identities, and ensures platform integrity.

COM Port Header  
(9-pin COM1)  
(see p.6, No. 38)

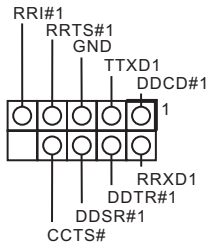


This COM1 header supports a serial port module.

SATA SGPIO Connectors  
(7-pin SATA\_SGPIO1)  
(see p.6, No. 33)  
(7-pin SATA\_SGPIO2)  
(see p.6, No. 34)  
(7-pin SATA\_SGPIO3)  
(see p.6, No. 27)

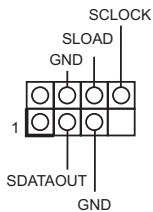


These connectors support Serial Link interface for onboard SATA connections.

PWM Configuration  
Header  
(3-pin PWM\_CFG1)  
(see p.6, No. 8)




This header is used for PWM configurations.

ATX 12V Power  
Connectors  
(8-pin ATX12V1)  
(see p.6, No. 5)  
(8-pin ATX12V2)  
(see p.6, No. 6)  
(8-pin ATX12V3)  
(see p.6, No. 7)

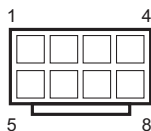


This motherboard provides three 8-pin ATX 12V power connectors.

SATA Power Connector  
(DC-IN Mode)  
(6-pin SATAPWR1)  
(see p.6, No. 25)



When using DC-IN mode without SATA power, please use a SATA power cable to connect this SATA power connector and the SATA hard drive to provide power from the motherboard.

Micro-Fit Power  
Connector  
(4-pin ATX4PIN1)  
(ATX 24pin-to-4pin)  
(see p.6, No. 4)




The motherboard provides one 4-pin power/signal connector which is a required input for ATX power source. When using ATX power, it is necessary to use a 24pin-to-4pin power cable to connect between the 24pin power connector of PSU and the ATX12V1, ATX12V2 or ATX12V3 connector on the motherboard for power supply and signal communication.



## System Fan Connectors


(6-pin FAN1)  
(see p.6, No. 19)  
(6-pin FAN2)  
(see p.6, No. 21)  
(6-pin FAN3)  
(see p.6, No. 23)  
(6-pin FAN4)  
(see p.6, No. 18)  
(6-pin FAN5)  
(see p.6, No. 20)  
(6-pin FAN6)  
(see p.6, No. 22)

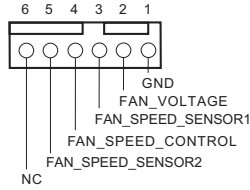

Please connect fan cables to the fan connectors and match the black wire to the ground pin. All fans support Fan Control.

## PSU SMBus


(PSU\_SMB1)  
(see p.6, No. 24)

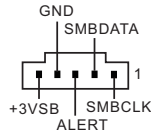

PSU SMBus monitors the status of the power supply, fan and system temperature.

## Intelligent Platform Management Bus header


(4-pin IPMB1)  
(see p.6, No. 36)

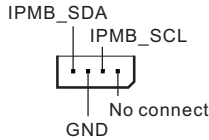

This 4-pin connector is used to provide a cabled base-board or front panel connection for value added features and 3rd-party add-in cards, such as Emergency Management cards, that provide management features using the IPMB.

## Baseboard Management Controller SMBus Header


(5-pin BMC\_SMB1)  
(see p.6, No. 37)

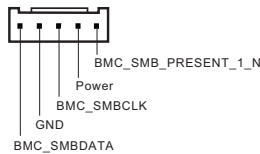

This header is used for the SMBUS devices.


## OCuLink Connectors

(OCU1)  
(see p.6, No. 26)




Please connect PCIe SSDs or OCuLink-to-SATA x4 cable to the connectors.

Backplane PCI Express  
Hot-Plug Connector  
(5-pin CPU1\_HSBP1)  
(see p.6, No. 32)

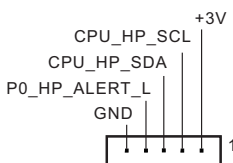


This header is used for the hot plug feature of HDDs on the backplane.

IPMI LAN LED Header  
(5-pin IPMI\_LED1)  
(see p.6, No. 1)  
(for SIENAD8UD-2L2Q only)  
(see p.6, No. 48)  
(for SIENAD8UD2-2Q only)

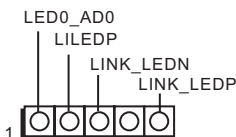

This header is used to connect to the LED indicators on the chassis.

Front LAN LED Header  
(4-pin LED\_LAN\_3\_4)  
(see p.6, No. 46)  
(for SIENAD8UD-2L2Q only)

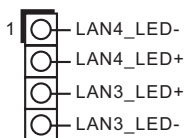

This 4-pin connector is used for the front LAN status indicator.

Clear CMOS Pad  
(CLRMOS1)  
(see p.6, No. 42)



CLRMOS1 allows user to clear the data in CMOS. To clear CMOS, take out the CMOS battery and short the Clear CMOS Pad.

MCIO Connectors  
(MCIO1)  
(see p.6, No. 9)  
(MCIO2)  
(see p.6, No. 10)  
(MCIO3)  
(see p.6, No. 12)  
(MCIO4)  
(see p.6, No. 14)  
**Right Angle**  
(MCIO5)  
(see p.6, No. 16)



The connectors are used for the PCIe devices.

**MCIO1 Pin Definition**

Pin	Defeinition	Pin	Defeinition
A1	GND	B1	GND
A2	G3_RXP7	B2	G3_TXP7
A3	G3_RXN7	B3	G3_TXN7
A4	GND	B4	GND
A5	G3_RXP6	B5	G3_TXP6
A6	G3_RXN6	B6	G3_TXN6
A7	GND	B7	GND
A8	BP_TYPE	B8	SCL
A9	WAKE#	B9	SDA
A10	GND	B10	GND
A11	DP	B11	RST0_L
A12	DN	B12	PRSNT_N
A13	GND	B13	GND
A14	G3_RXP5	B14	G3_TXP5
A15	G3_RXN5	B15	G3_TXN5
A16	GND	B16	GND
A17	G3_RXP4	B17	G3_TXP4
A18	G3_RXN4	B18	G3_TXN4
A19	GND	B19	GND
A20	G3_RXP3	B20	G3_TXP3
A21	G3_RXN3	B21	G3_TXN3
A22	GND	B22	GND
A23	G3_RXP2	B23	G3_TXP2
A24	G3_RXN2	B24	G3_TXN2
A25	GND	B25	GND
A26	BP_TYPE	B26	SCL
A27	WAKE#	B27	SDA
A28	GND	B28	GND
A29	DP	B29	RST0_L
A30	DN	B30	PRSNT_N
A31	GND	B31	GND
A32	G3_RXP1	B32	G3_TXP1
A33	G3_RXN1	B33	G3_TXN1
A34	GND	B34	GND
A35	G3_RXP0	B35	G3_TXP0
A36	G3_RXN0	B36	G3_TXN0
A37	GND	B37	GND
75	NP_NC_1	76	NP_NC_2
77	PGND_1	78	PGND_3
79	PGND_2	80	PGND_4

## MCIO2 Pin Definition

Pin	Defeinition	Pin	Defeinition
A1	GND	B1	GND
A2	G3_RXP15	B2	G3_TXP15
A3	G3_RXN15	B3	G3_TXN15
A4	GND	B4	GND
A5	G3_RXP14	B5	G3_TXP14
A6	G3_RXN14	B6	G3_TXN14
A7	GND	B7	GND
A8	BP_TYPE	B8	SCL
A9	WAKE#	B9	SDA
A10	GND	B10	GND
A11	DP	B11	RST0_L
A12	DN	B12	PRSNT_N
A13	GND	B13	GND
A14	G3_RXP13	B14	G3_TXP13
A15	G3_RXN13	B15	G3_TXN13
A16	GND	B16	GND
A17	G3_RXP12	B17	G3_TXP12
A18	G3_RXN12	B18	G3_TXN12
A19	GND	B19	GND
A20	G3_RXP11	B20	G3_TXP11
A21	G3_RXN11	B21	G3_TXN11
A22	GND	B22	GND
A23	G3_RXP10	B23	G3_TXP10
A24	G3_RXN10	B24	G3_TXN10
A25	GND	B25	GND
A26	BP_TYPE	B26	SCL
A27	WAKE#	B27	SDA
A28	GND	B28	GND
A29	DP	B29	RST0_L
A30	DN	B30	PRSNT_N
A31	GND	B31	GND
A32	G3_RXP9	B32	G3_TXP9
A33	G3_RXN9	B33	G3_TXN9
A34	GND	B34	GND
A35	G3_RXP8	B35	G3_TXP8
A36	G3_RXN8	B36	G3_TXN8
A37	GND	B37	GND
75	NP_NC_1	76	NP_NC_2
77	PGND_1	78	PGND_3
79	PGND_2	80	PGND_4

**MCIO3 Pin Definition**

Pin	Defeinition	Pin	Defeinition
A1	GND	B1	GND
A2	G2_RXP7	B2	G2_TXP7
A3	G2_RXN7	B3	G2_TXN7
A4	GND	B4	GND
A5	G2_RXP6	B5	G2_TXP6
A6	G2_RXN6	B6	G2_TXN6
A7	GND	B7	GND
A8	BP_TYPE	B8	SCL
A9	WAKE#	B9	SDA
A10	GND	B10	GND
A11	DP	B11	RST0_L
A12	DN	B12	PRSNT_N
A13	GND	B13	GND
A14	G2_RXP5	B14	G2_TXP5
A15	G2_RXN5	B15	G2_TXN5
A16	GND	B16	GND
A17	G2_RXP4	B17	G2_TXP4
A18	G2_RXN4	B18	G2_TXN4
A19	GND	B19	GND
A20	G2_RXP3	B20	G2_TXP3
A21	G2_RXN3	B21	G2_TXN3
A22	GND	B22	GND
A23	G2_RXP2	B23	G3_TXP2
A24	G2_RXN2	B24	G3_TXN2
A25	GND	B25	GND
A26	BP_TYPE	B26	SCL
A27	WAKE#	B27	SDA
A28	GND	B28	GND
A29	DP	B29	RST0_L
A30	DN	B30	PRSNT_N
A31	GND	B31	GND
A32	G2_RXP1	B32	G2_TXP1
A33	G2_RXN1	B33	G2_TXN1
A34	GND	B34	GND
A35	G2_RXP0	B35	G2_TXP0
A36	G2_RXN0	B36	G2_TXN0
A37	GND	B37	GND
75	NP_NC_1	76	NP_NC_2
77	PGND_1	78	PGND_3
79	PGND_2	80	PGND_4

## MCIO4 Pin Definition

Pin	Defeinition	Pin	Defeinition
A1	GND	B1	GND
A2	G2_RXP15	B2	G2_TXP15
A3	G2_RXN15	B3	G2_TXN15
A4	GND	B4	GND
A5	G2_RXP14	B5	G2_TXP14
A6	G2_RXN14	B6	G2_TXN14
A7	GND	B7	GND
A8	BP_TYPE	B8	SCL
A9	WAKE#	B9	SDA
A10	GND	B10	GND
A11	DP	B11	RST0_L
A12	DN	B12	PRSNT_N
A13	GND	B13	GND
A14	G2_RXP13	B14	G2_TXP13
A15	G2_RXN13	B15	G2_TXN13
A16	GND	B16	GND
A17	G2_RXP12	B17	G2_TXP12
A18	G2_RXN12	B18	G2_TXN12
A19	GND	B19	GND
A20	G2_RXP11	B20	G2_TXP11
A21	G2_RXN11	B21	G2_TXN11
A22	GND	B22	GND
A23	G2_RXP10	B23	G2_TXP10
A24	G2_RXN10	B24	G2_TXN10
A25	GND	B25	GND
A26	BP_TYPE	B26	SCL
A27	WAKE#	B27	SDA
A28	GND	B28	GND
A29	DP	B29	RST0_L
A30	DN	B30	PRSNT_N
A31	GND	B31	GND
A32	G2_RXP9	B32	G2_TXP9
A33	G2_RXN9	B33	G2_TXN9
A34	GND	B34	GND
A35	G2_RXP8	B35	G2_TXP8
A36	G2_RXN8	B36	G2_TXN8
A37	GND	B37	GND
75	NP_NC_1	76	NP_NC_2
77	PGND_1	78	PGND_3
79	PGND_2	80	PGND_4

## MCIO5 Pin Definition

Pin	Defeinition	Pin	Defeinition
A1	GND	B1	GND
A2	G0_RXP0	B2	G0_TXP0
A3	G0_RXN0	B3	G0_TXN0
A4	GND	B4	GND
A5	G0_RXP1	B5	G0_TXP1
A6	G0_RXN1	B6	G0_TXN1
A7	GND	B7	GND
A8	BP_TYPE	B8	SCL
A9	WAKE#	B9	SDA
A10	GND	B10	GND
A11	DP	B11	RST0_L
A12	DN	B12	PRSENT_N
A13	GND	B13	GND
A14	G0_RXP2	B14	G0_TXP2
A15	G0_RXN2	B15	G0_TXN2
A16	GND	B16	GND
A17	G0_RXP3	B17	G0_TXP3
A18	G0_RXN3	B18	G0_TXN3
A19	GND	B19	GND
A20	G0_RXP4	B20	G0_TXP4
A21	G0_RXN4	B21	G0_TXN4
A22	GND	B22	GND
A23	G0_RXP5	B23	G0_TXP5
A24	G0_RXN5	B24	G0_TXN5
A25	GND	B25	GND
A26	BP_TYPE	B26	SCL
A27	WAKE#	B27	SDA
A28	GND	B28	GND
A29	DP	B29	RST0_L
A30	DN	B30	PRSENT_N
A31	GND	B31	GND
A32	G0_RXP6	B32	G0_TXP6
A33	G0_RXN6	B33	G0_TXN6
A34	GND	B34	GND
A35	G0_RXP7	B35	G0_TXP7
A36	G0_RXN7	B36	G0_TXN7
A37	GND	B37	GND
75	NP_NC_1	76	NP_NC_2
77	PGND_1	78	PGND_3
79	PGND_2	80	PGND_4

## 2.7 Unit Identification purpose LED/Switch

The UID button allows user to locate the server working on from behind a rack of servers.

Unit Identification  
purpose LED/Switch  
(UID1)



When the UID button on the front or rear panel is pressed, the front/rear UID blue LED indicator will be turned on. Press the UID button again to turn off the indicator.



- 1. Press and hold the UID button for 4 seconds, the BMC will trigger an external reset.*
- 2. Press and hold the UID button for 10 seconds, the BMC will reset and load default values.*



## 2.8 Dr. Debug

Dr. Debug is used to provide code information, which makes troubleshooting even easier. Please see the diagrams below for reading the Dr. Debug codes.

Code	Description
0x10	PEI_CORE_STARTED
0x11	PEI_CAR_CPU_INIT
0x15	PEI_CAR_NB_INIT
0x19	PEI_CAR_SB_INIT
0x31	PEI_MEMORY_INSTALLED
0x32	PEI_CPU_INIT
0x33	PEI_CPU_CACHE_INIT
0x34	PEI_CPU_AP_INIT
0x35	PEI_CPU_BSP_SELECT
0x36	PEI_CPU_SMM_INIT
0x37	PEI_MEM_NB_INIT
0x3B	PEI_MEM_SB_INIT
0x4F	PEI_DXE_IPL_STARTED
0x60	DXE_CORE_STARTED
0x61	DXE_NVRAM_INIT
0x62	DXE_SBRUN_INIT

0x63            DXE\_CPU\_INIT

0x68            DXE\_NB\_HB\_INIT

0x69            DXE\_NB\_INIT

0x6A            DXE\_NB\_SMM\_INIT

0x70            DXE\_SB\_INIT

0x71            DXE\_SB\_SMM\_INIT

0x72            DXE\_SB\_DEVICES\_INIT

0x78            DXE\_ACPI\_INIT

0x79            DXE\_CSM\_INIT

0x90            DXE\_BDS\_STARTED

0x91            DXE\_BDS\_CONNECT\_DRIVERS

0x92            DXE\_PCI\_BUS\_BEGIN

0x93            DXE\_PCI\_BUS\_HPC\_INIT

0x94            DXE\_PCI\_BUS\_ENUM

0x95            DXE\_PCI\_BUS\_REQUEST\_RESOURCES

0x96            DXE\_PCI\_BUS\_ASSIGN\_RESOURCES

0x97            DXE\_CON\_OUT\_CONNECT

0x98            DXE\_CON\_IN\_CONNECT

0x99	DXE_SIO_INIT
0x9A	DXE_USB_BEGIN
0x9B	DXE_USB_RESET
0x9C	DXE_USB_DETECT
0x9D	DXE_USB_ENABLE
0xA0	DXE_IDE_BEGIN
0xA1	DXE_IDE_RESET
0xA2	DXE_IDE_DETECT
0xA3	DXE_IDE_ENABLE
0xA4	DXE_SCSI_BEGIN
0xA5	DXE_SCSI_RESET
0xA6	DXE_SCSI_DETECT
0xA7	DXE_SCSI_ENABLE
0xA8	DXE_SETUP_VERIFYING_PASSWORD
0xA9	DXE_SETUP_START
0xAB	DXE_SETUP_INPUT_WAIT
0xAD	DXE_READY_TO_BOOT
0xAE	DXE_LEGACY_BOOT

0xAF	DXE_EXIT_BOOT_SERVICES
0xB0	RT_SET_VIRTUAL_ADDRESS_MAP_BEGIN
0xB1	RT_SET_VIRTUAL_ADDRESS_MAP_END
0xB2	DXE_LEGACY_OPROM_INIT
0xB3	DXE_RESET_SYSTEM
0xB4	DXE_USB_HOTPLUG
0xB5	DXE_PCI_BUS_HOTPLUG
0xB6	DXE_NVRAM_CLEANUP
0xB7	DXE_CONFIGURATION_RESET
0xF0	PEI_RECOVERY_AUTO
0xF1	PEI_RECOVERY_USER
0xF2	PEI_RECOVERY_STARTED
0xF3	PEI_RECOVERY_CAPSULE_FOUND
0xF4	PEI_RECOVERY_CAPSULE_LOADED
0xE0	PEI_S3_STARTED
0xE1	PEI_S3_BOOT_SCRIPT
0xE2	PEI_S3_VIDEO_REPOST


0xE3	PEI_S3_OS_WAKE
0x50	PEI_MEMORY_INVALID_TYPE
0x53	PEI_MEMORY_NOT_DETECTED
0x55	PEI_MEMORY_NOT_INSTALLED
0x57	PEI_CPU_MISMATCH
0x58	PEI_CPU_SELF_TEST_FAILED
0x59	PEI_CPU_NO_MICROCODE
0x5A	PEI_CPU_ERROR
0x5B	PEI_RESET_NOT_AVAILABLE
0xD0	DXE_CPU_ERROR
0xD1	DXE_NB_ERROR
0xD2	DXE_SB_ERROR
0xD3	DXE_ARCH_PROTOCOL_NOT_AVAILABLE
0xD4	DXE_PCI_BUS_OUT_OF_RESOURCES
0xD5	DXE_LEGACY_OPROM_NO_SPACE
0xD6	DXE_NO_CON_OUT
0xD7	DXE_NO_CON_IN

0xD8	DXE_INVALID_PASSWORD
0xD9	DXE_BOOT_OPTION_LOAD_ERROR
0xDA	DXE_BOOT_OPTION_FAILED
0xDB	DXE_FLASH_UPDATE_FAILED
0xDC	DXE_RESET_NOT_AVAILABLE
0xE8	PEI_MEMORY_S3_RESUME_FAILED
0xE9	PEI_S3_RESUME_PPI_NOT_FOUND
0xEA	PEI_S3_BOOT_SCRIPT_ERROR
0xEB	PEI_S3_OS_WAKE_ERROR


## 2.9 ATX PSU / DC-IN Power Connections

This motherboard supports both +12V DC and ATX power input. Please refer to the table below for the required connections between the motherboard and the power supply.

Connector	DC-IN	ATX PSU
12V 8pin	O	O
ATX 4pin (Micro-Fit Connector)	X	O (with the bundled ATX 24pin-to-4pin converter cable)

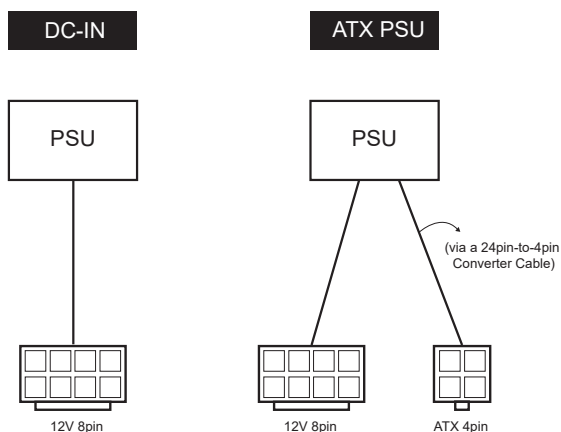

The following diagram illustrates how to connect the bundled ATX 24pin-to-4pin converter cable.

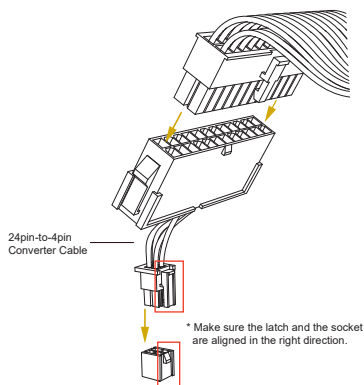

## 2.10 Dual LAN and Teaming Operation Guide

Dual LAN with Teaming enabled on this motherboard allows two single connections to act as one single connection(s) for twice the transmission bandwidth, making data transmission more effective and improving the quality of transmission of distant images. Fault tolerance on the dual LAN network prevents network downtime by transferring the workload from a failed port to a working port.



*The speed of transmission is subject to the actual network environment or status even with Teaming enabled.*

Before setting up Teaming, please make sure whether the Switch (or Router) supports Teaming (IEEE 802.3ad Link Aggregation). Specify a preferred adapter in Intel PROSet. Under normal conditions, the Primary adapter handles all non-TCP/IP traffic. The Secondary adapter will receive fallback traffic if the primary fails. If the Preferred Primary adapter fails, but is later restored to an active status, control is automatically switched back to the Preferred Primary adapter.

### **Step 1**

From **Device Manager**, open the properties of a team.

### **Step 2**

Click the **Settings** tab.

### **Step 3**

Click the **Modify Team** button.

### **Step 4**

Select the adapter to the primary adapter and click the **Set Primary** button.


If it does not specify a preferred primary adapter, the software will choose an adapter of the highest capability (model and speed) to act as the default primary. If a failover occurs, another adapter becomes the primary. The adapter will, however, rejoin the team as a non-primary.



## 2.11 M.2\_SSD Module Installation Guide


The M.2 Socket (M2\_1/M2\_2, Key M) supports type 2280/22110 M.2 SATA 6.0 Gb/s module or M.2 PCI Express module up to Gen5 x4 (32GT/s x4).

### Installing the M.2\_SSD Module



#### Step 1



Prepare a M.2 SSD module and the screw.

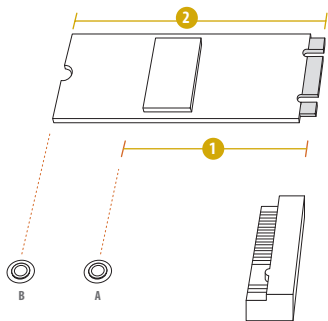

#### Step 2


Depending on the PCB type and length of the M.2 SSD module, find the corresponding nut location to be used.

No.	1	2
Nut Location	A (NUT80_1/NUT80_2)	B (NUT110_1/NUT110_2)
PCB Length	8cm	11cm
Module Type	Type 2280	Type 22110

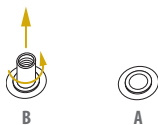


### Step 3

Move the standoff based on the module type and length. Skip Step 3 and 4 and go straight to Step 5 if using the default nut. Otherwise, release the standoff by hand.





### Step 4

Peel off the yellow protective film on the nut to be used. Hand tighten the standoff into the desired nut location on the motherboard.

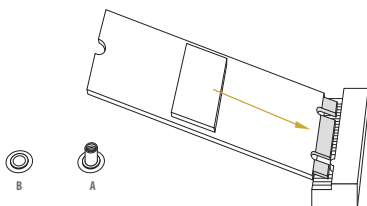

### Step 5

Align and gently insert the M.2 SSD module into the M.2 slot. Please be aware that the M.2 SSD module only fits in one orientation.

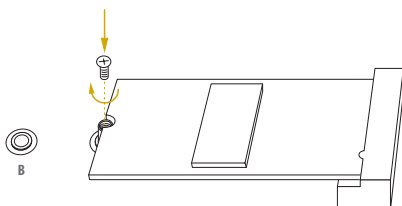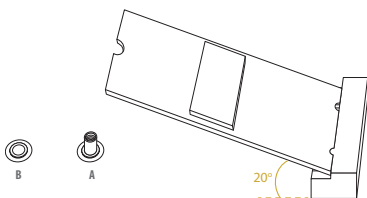

### Step 6

Tighten the screw with a screwdriver to secure the module into place. Please do not overtighten the screw as this might damage the module.

# Chapter 3 UEFI Setup Utility

## 3.1 Introduction

This section explains how to use the UEFI SETUP UTILITY to configure the system. The UEFI chip on the motherboard stores the UEFI SETUP UTILITY. Run the UEFI SETUP UTILITY when starting up the computer. Please press <F2> or <Del> during the Power-On-Self-Test (POST) to enter the UEFI SETUP UTILITY; otherwise, POST will continue with its test routines.

Restart the system by pressing <Ctrl> + <Alt> + <Delete> to enter the UEFI SETUP UTILITY after POST, or by pressing the reset button on the system chassis. This allows user to restart by turning the system off and then back on.



*Because the UEFI software is constantly being updated, the following UEFI setup screens and descriptions are for reference purpose only, and they may not exactly match what seeing on the screen.*

### 3.1.1 UEFI Menu Bar

The top of the screen has a menu bar with the following selections:

Item	Description
Main	To set up the system time/date information
Advanced	To set up the advanced UEFI features
Server Mgmt	To manage the server
Event Logs	For event log configuration
Security	To set up the security features
Boot	To set up the default system device to locate and load the Operating System
Exit	To exit the current screen or the UEFI SETUP UTILITY

Use <←> key or <→> key to choose among the selections on the menu bar, and then press <Enter> to get into the sub screen.

### 3.1.2 Navigation Keys

Please check the following table for the function description of each navigation key.

Navigation Key(s)	Function Description
← / →	Moves cursor left or right to select Screens
↑ / ↓	Moves cursor up or down to select items
+ / -	To change option for the selected items
<Tab>	Switch to next function
<Enter>	To bring up the selected screen
<PGUP>	Go to the previous page
<PGDN>	Go to the next page
<HOME>	Go to the top of the screen
<END>	Go to the bottom of the screen
<F1>	To display the General Help Screen
<F7>	Discard changes and exit the UEFI SETUP UTILITY
<F9>	Load optimal default values for all the settings
<F10>	Save changes and exit the UEFI SETUP UTILITY
<F12>	Print screen
<ESC>	Jump to the Exit Screen or exit the current screen

## 3.2 Main Screen


Once entering the UEFI SETUP UTILITY, the Main screen will appear and display the system overview. The Main screen provides system overview information and allows user to set the system time and date.



*The screenshots in this user manual are examples and for references only. The actual images may slightly vary depending on the model and the version used.*


### 3.2.1 Mother Board Information

Press <Enter> to view the information of the motheboard.

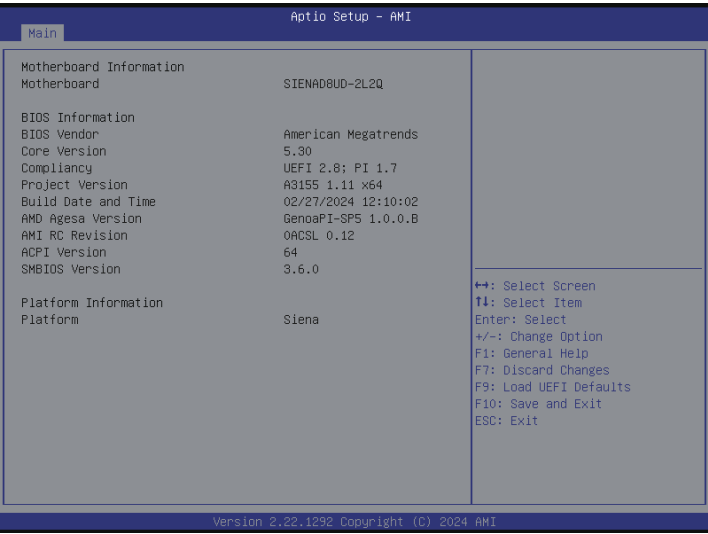


### 3.2.2 Processor Information

Press <Enter> to view the information of the processor.

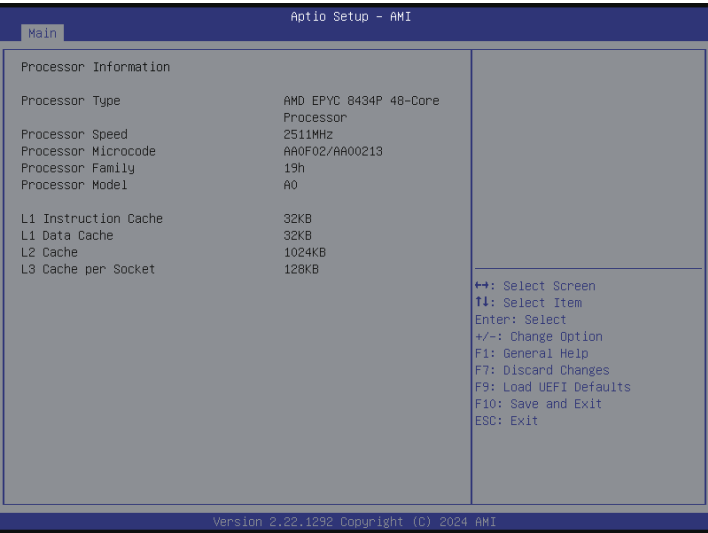


### 3.2.3 Memory Information

Press <Enter> to view the information of the memory.

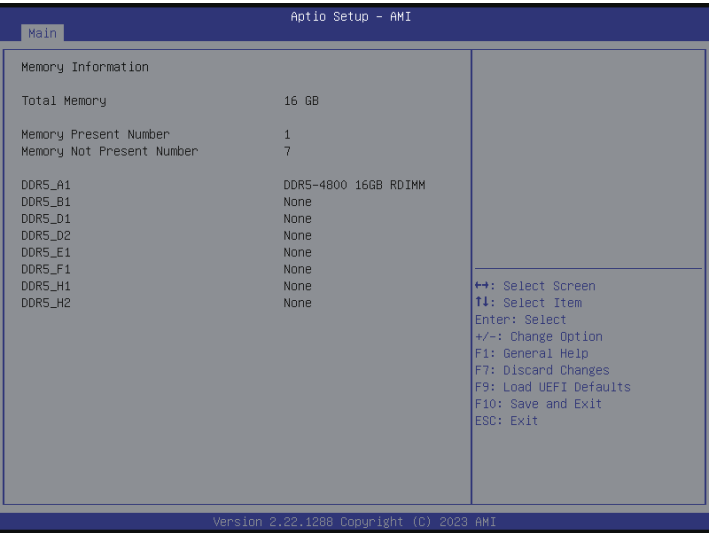

### 3.3 Advanced Screen

In this section, set the configurations for the following items: CPU Configuration, Chipset Configuration, Storage Configuration, NVMe Configuration, ACPI Configuration, USB Configuration, Super IO Configuration, Serial Port Console Redirection, H/W Monitor, PCI Subsystem Settings, AMD CBS, AMD PBS, PSP Firmware Versions, Network Stack-Configuration, Driver Health, Tls Auth Configuration and Instant Flash.

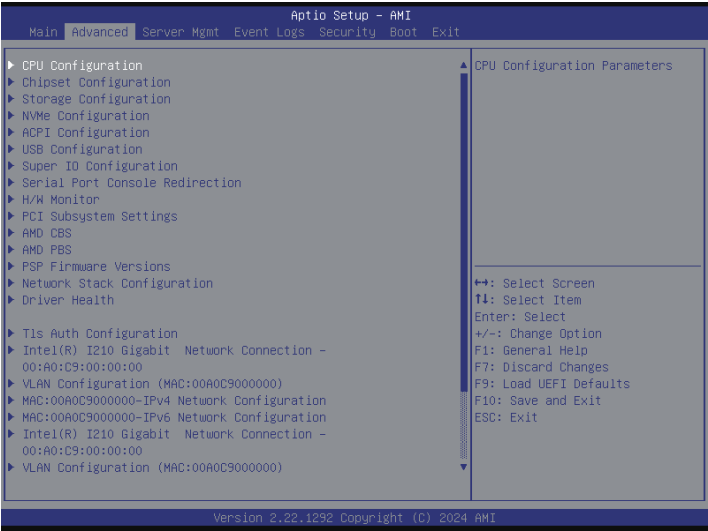

Setting wrong values in this section may cause the system to malfunction.



### 3.3.1 CPU Configuration



#### SVM Mode

Enable or disable CPU Virtualization.

### 3.3.2 Chipset Configuration



#### Onboard VGA

Use this to enable or disable the Onboard VGA function.

#### Onboard LAN (BCM57414) *(for SIENAD8UD-2L2Q only)* / (BCM57502) *(for SIENAD8UD2-2Q only)*

Use this item to enable or disable the Boot From Onboard LAN feature.

#### Onboard LAN (I210 LAN1) *(for SIENAD8UD-2L2Q only)*

Use this item to enable or disable the Boot From Onboard LAN feature.

#### Onboard LAN (I210 LAN2) *(for SIENAD8UD-2L2Q only)*

Use this item to enable or disable the Boot From Onboard LAN feature.

#### PCIE Mode Selection

This item is for PCIE Mode Configuration.

#### PCIE7 Mode Selection

Select SATA or PCIE work in PCIE port.

#### MCIO Mode Selection

This item is for MCIO Mode Configuration.

**MCIO1/MCIO2 Mode Selection**

Select SATA or PCIE work in MCIO port.

**PCIE Link Width**

This displays the PCIE Link Width.

**PCIE4/PCIE6/PCIE7, MCIO1/MCIO2/MCIO3/MCIO4/MCIO5 Link Width**

The default values for PCIE4/PCIE6 are [x16], PCIE7 is [x8], MCIO1/MCIO2/MCIO3/MCIO4/MCIO5 are [x4x4].

**PCIE Link Speed**

This displays the PCIE Link Speed.

**PCIE4/PCIE6/PCIE7 Link Speed**

Set the AMD CBS/CXL Common Options/CXL Control to Disable and press F10 to save the changed value so that allowing user to configure this item.

**MCIO1/MCIO2/MCIO3/MCIO4/MCIO5/M2\_1/M2\_2/OCU1 Link Speed**

All of the default values are [Auto].

**PCIE Hotplug**

Select this item to enable or disable Hot Plug for PCIE4/PCIE6/PCIE7, MCIO1/MCIO2/MCIO3/MCIO4/MCIO5, M2\_1/M2\_2, OCU1 globally.


**PCIE ASPM**

Selec this item to disable ASPM support in all PCIe root ports. The default value is [Auto].

**Onboard Debug Port LED**

Use this item to configure the onboard Dr. Debug LED.

### 3.3.3 Storage Configuration

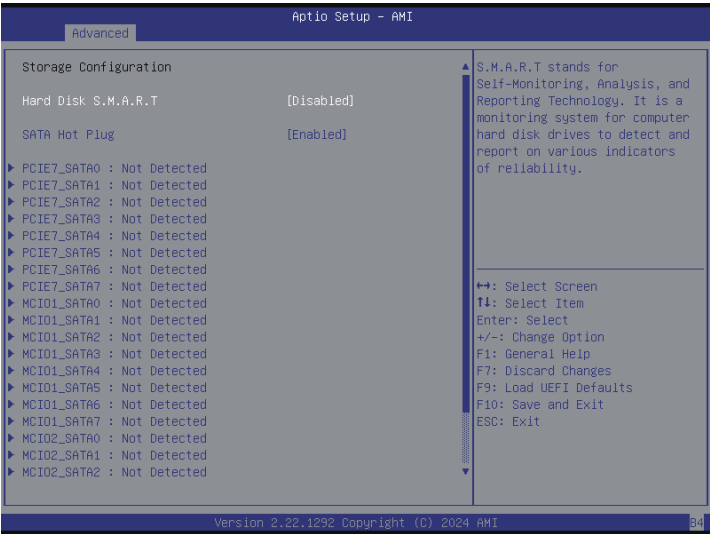

#### Hard Disk S.M.A.R.T.

S.M.A.R.T stands for Self-Monitoring, Analysis, and Reporting Technology. It is a monitoring system for computer hard disk drives to detect and report on various indicators of reliability.

#### SATA Hot Plug

Use this item to enable or disable the SATA Hot Plug Function.

### 3.3.4 NVMe Configuration



The NVMe Configuration displays the NVMe Drive Options Settings.

#### Launch NVMe driver

Select this item to enable or disable launch NVMe driver.

### 3.3.5 ACPI Configuration



#### PCIE Devices Power On

Allow the system to be waked up by a PCIE device and enable wake on LAN.

#### Ring-In Power On

Allow the system to be waked up by onboard COM port modem Ring-In Signals.

#### RTC Alarm Power On

Allow the system to be waked up by real time clock alarm. Set it to By OS to let it be handled by the operating system.

#### RTC Alarm Date

Use this item to set Date of RTC power on feature.

#### RTC Alarm Hour

Use this item to set Hour of RTC power on feature.


#### RTC Alarm Minute

Use this item to set Minute of RTC power on feature.

#### RTC Alarm Second


Use this item to set Second of RTC power on feature.

### 3.3.6 USB Configuration

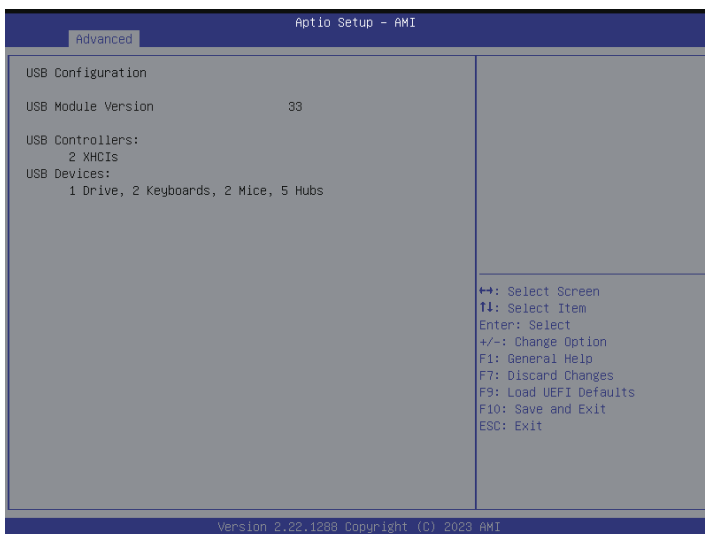

This displays the USB Module Version, Controllers and USB Devices information.

### 3.3.7 Super IO Configuration

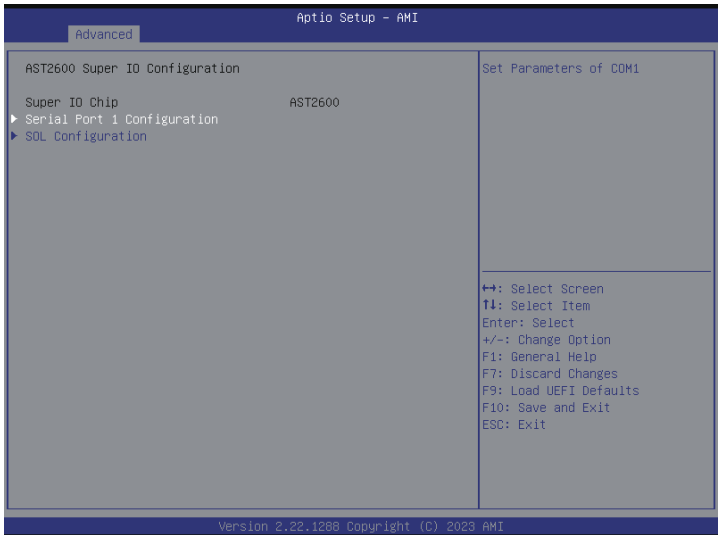

#### Serial Port 1 Configuration

Use this item to set parameters of Serial Port 1 (COMA).

##### Serial Port

Use this item to enable or disable the Serial Port (COM).

##### Change Settings

Use this item to select an optimal setting for Super IO device.

#### SOL Configuration

Use this item to set parameters of Serial Port 2 (COMB).

##### SOL Port


Use this item to enable or disable the Serial Port (COM).

##### Change Settings

Use this item to select an optimal setting for Super IO device.



### 3.3.8 Serial Port Console Redirection

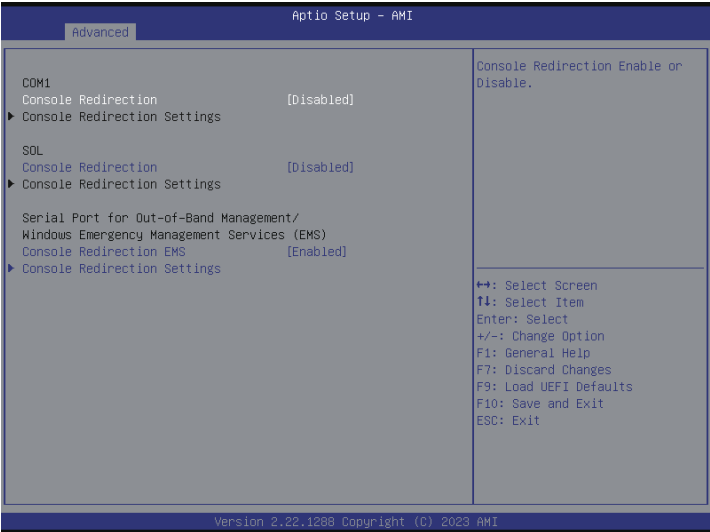

#### COM1 / SOL

#### Console Redirection

Use this option to enable or disable Console Redirection. If this item is set to Enabled, user can select a COM Port to be used for Console Redirection.

#### Console Redirection Settings

Use this option to configure Console Redirection Settings, and specify how the computer and the host computer to which are connected exchange information. Both computers should have the same or compatible settings.

#### Terminal Type

Use this item to select the preferred terminal emulation type for out-of-band management. It is recommended to select [VT-UTF8].

Option	Description
VT100	ASCII character set
VT100Plus	Extended VT100 that supports color and function keys
VT-UTF8	UTF8 encoding is used to map Unicode chars onto 1 or more bytes
ANSI	Extended ASCII character set

### **Bits Per Second**

Use this item to select the serial port transmission speed. The speed used in the host computer and the client computer must be the same. Long or noisy lines may require lower transmission speed. The options include [9600], [19200], [38400], [57600] and [115200].

### **Data Bits**

Use this item to set the data transmission size. The options include [7] and [8] (Bits).

### **Parity**

Use this item to select the parity bit. The options include [None], [Even], [Odd], [Mark] and [Space].

### **Stop Bits**

The item indicates the end of a serial data packet. The standard setting is [1] Stop Bit. Select [2] Stop Bits for slower devices.

### **Flow Control**

Use this item to set the flow control to prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a "stop" signal can be sent to stop the data flow. Once the buffers are empty, a "start" signal can be sent to restart the flow. Hardware flow uses two wires to send start/stop signals. The options include [None] and [Hardware RTS/CTS].

### **VT-UTF8 Combo Key Support**

Use this item to enable or disable the VT-UTF8 Combo Key Support for ANSI/VT100 terminals.

### **Recorder Mode**

Use this item to enable or disable Recorder Mode to capture terminal data and send it as text messages.

### **Resolution 100x31**

Use this item to enable or disable extended terminal resolution support.

### **Putty Keypad**

Use this item to select Function Key and Keypad on Putty.

## **Serial Port for Out-of-Band Management/Windows Emergency Management Services (EMS)**

### **Console Redirection EMS**

Use this option to enable or disable Console Redirection EMS. If this item is set to Enabled, user can select a COM Port to be used for Console Redirection.

### **Console Redirection Settings**

Use this option to configure Console Redirection Settings, and specify how the computer and the host computer to which are connected exchange information.

**Out-of-Band Mgmt Port**

Microsoft Windows Emergency Management Services (EMS) allows for remote management of a Windows Server OS through a serial port.

**Terminal Type EMS**

Use this item to select the preferred terminal emulation type for out-of-band management. It is recommended to select [VT-UTF8].

Option	Description
VT100	ASCII character set
VT100+	Extended VT100 that supports color and function keys
VT-UTF8	UTF8 encoding is used to map Unicode chars onto 1 or more bytes
ANSI	Extended ASCII character set

**Bits Per Second EMS**

Use this item to select the serial port transmission speed. The speed used in the host computer and the client computer must be the same. Long or noisy lines may require lower transmission speed. The options include [9600], [19200], [57600] and [115200].

**Flow Control EMS**

Use this item to set the flow control to prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a "stop" signal can be sent to stop the data flow. Once the buffers are empty, a "start" signal can be sent to restart the flow. Hardware flow uses two wires to send start/stop signals. The options include [None], [Hardware RTS/CTS], and [Software Xon/Xoff].


**Data Bits EMS**

**Parity EMS**


**Stop Bits EMS**

### 3.3.9 H/W Monitor

In this section, it allows user to monitor the status of the hardware on the system, including the parameters of the CPU temperature, motherboard temperature, CPU fan speed, chassis fan speed, and the critical voltage.

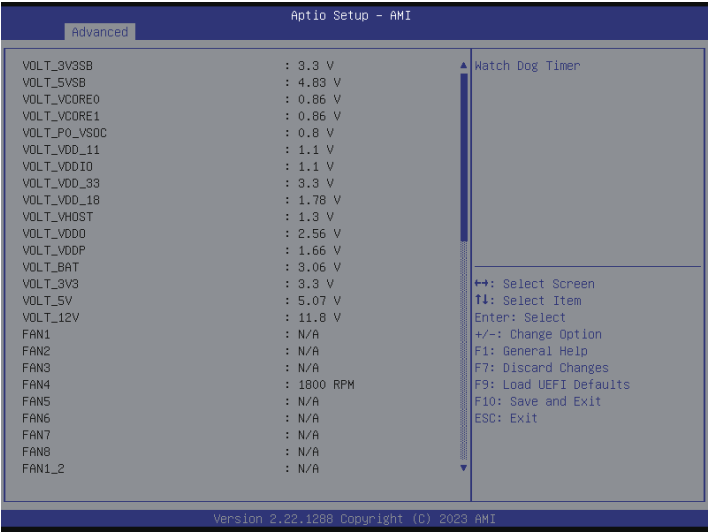

### 3.3.10 PCI Subsystem Settings

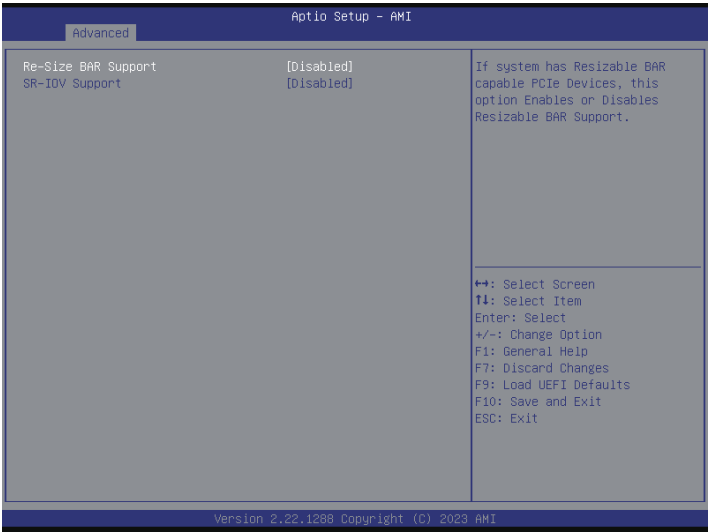


#### Re-Size BAR Support

If the system has Resizable BAR capable PCIe Devices, this option enables or disables the Resizable BAR Support.

#### SR-IOV Support

If the system has SR-IOV capable PCIe Devices, this option enables or disables the Single Root IO Virtualization Support.

### 3.3.11 AMD CBS

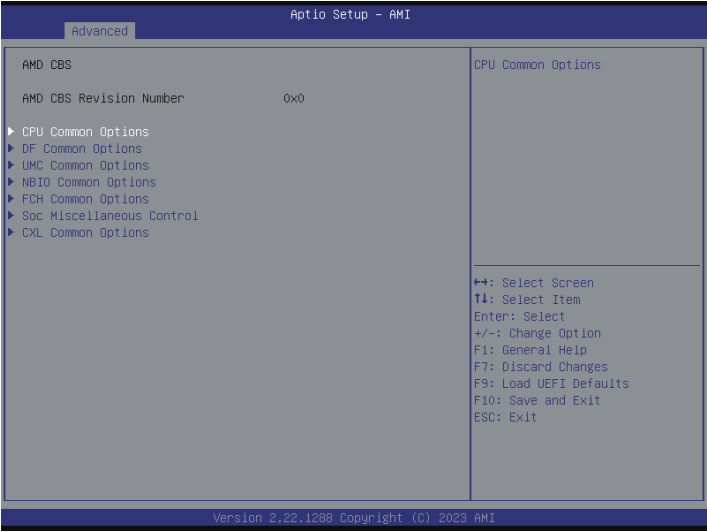

#### CPU Common Options

Use this item to configure CPU Common options.

#### DF Common Options

Use this item to configure DF Common options.

#### UMC Common Options

Use this item to configure UMC Common options.

#### NBIO Common Options

Use this item to configure NBIO Common options.

#### FCH Common Options

Use this item to configure FCH Common options.

#### Soc Miscellaneous Control

Use this item to configure Soc Miscellaneous Control options.

#### CXL Common Options

Use this item to configure CXL Common options.

### 3.3.12 AMD PBS



#### RAS

Use this item to configure AMD CPM RAS related settings.

##### **RAS Periodic SMI Control**

Use this to enable or disable Periodic SMI for polling [MCA Threshold] error.

##### **SMI Threshold**

This limits the number of [MCA Threshold and Deferred Error SMI source] per a unit time.

##### **SMI Scale**

Use this to define the time scale.

##### **SMI Scale Unit**

Use this to define the unit of time scale.

##### **SMI Period**

Use this to define the polling interval with ms unit. Input 0 value to disable this function.

##### **GHEs Notify Type**

This specifies the notification type for deferred/corrected errors.

##### **GHEs UnCorr Notify Type**

This specifies the notification type for uncorrected errors.

##### **PCIe GHEs Notify Type**

This specifies the notification type for PCIe corrected errors.

### **PCIe UnCorr GHES Notify Type**

This specifies the notification type for PCIe uncorrected errors.

### **PCIe Root Port Corr Err Mask Reg**

Use this to initialize the PCIe AER Corrected Error Mask register of root port.

### **PCIe Root Port UnCorr Err Mask Reg**

Use this to initialize the PCIe AER Uncorrected Error Mask register of root port.

### **PCIe Root Port UnCorr Err Sev Reg**

Use this to initialize the PCIe AER Uncorrected Error Severity registers of root port.

### **PCIe Device Corr Err Mask Reg**

Use this to initialize the PCIe AER Corrected Error Mask register of PCIe device.

### **PCIe Device UnCorr Err Mask Reg**

Use this to initialize the PCIe AER Uncorrected Error Mask register of PCIe device.

### **PCIe Device UnCorr Error Sev Reg**

Use this to initialize the PCIe AER Uncorrected Error Severity registers of PCIe device

### **CXL DP CIE Mask Enable**

Use this to enable or disable masking of CXL DP Correctable Error-Internal Error.

### **DRAM Hard Post Package Repair**

Use this to enable or disable the spare DRAM rows to replace malfunctioning rows via an in-field repair mechanism.

### **HEST DMC Structure Support**


Use this to enable or disable HEST DMC (Deferred Maching Check) Structure Support.

### **CXL Error Report Support**

Use this to enable or disable CXL Error Reporting.




### 3.3.13 PSP Firmware Versions

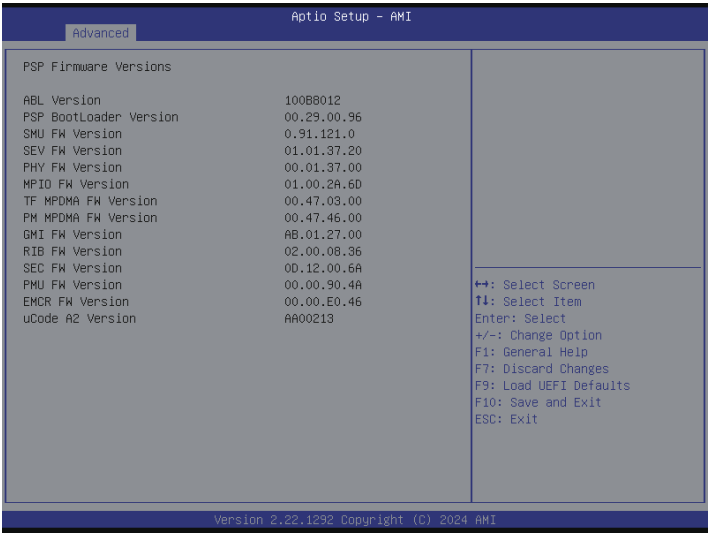

The PSP Firmware Versions displays the version information of ABL, PSP BootLoader, SMU FW, SEV FW, PHY FW, MPIO FW, TF MPDMA FW, PM MPDMA FW, GMI FW, RIB FW, SEC FW, PMU FW, EMCR FW and uCode A2.

### 3.3.14 Network Stack Configuration

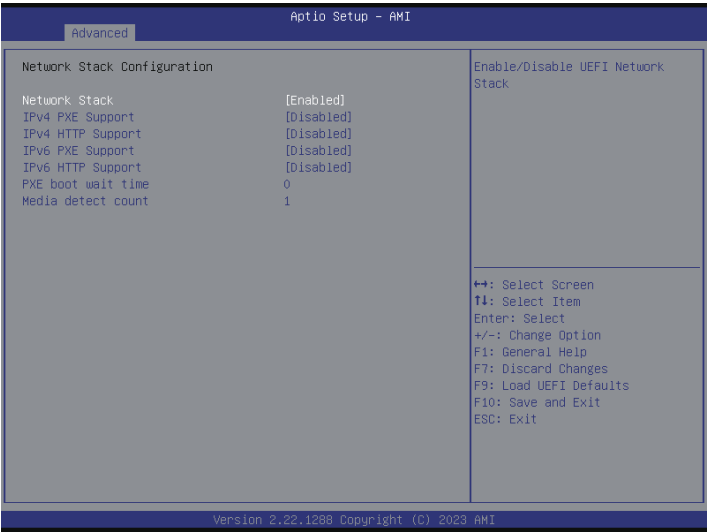

#### Network Stack

Use this to enable or disable UEFI Network Stack.

#### IPv4 PXE Support

Use this to enable or disable IPv4 PXE boot support. If disabled, IPv4 PXE boot support will not be available.

#### IPv4 HTTP Support

Use this to enable or disable IPv4 HTTP boot support. If disabled, IPv4 HTTP boot support will not be available.

#### IPv6 PXE Support

Use this to enable or disable IPv6 PXE boot support. If disabled, IPv6 PXE boot support will not be available.

#### IPv6 HTTP Support

Use this to enable or disable IPv6 HTTP boot support. If disabled, IPv6 HTTP boot support will not be available.


#### PXE boot wait time

Wait time in seconds to press ESC key to abort the PXE boot. Use either +/- or numeric keys to set the value.

## Media detect count

Number of times the presence of media will be checked. Use either +/- or numeric keys to set the value.

### 3.3.15 Driver Health

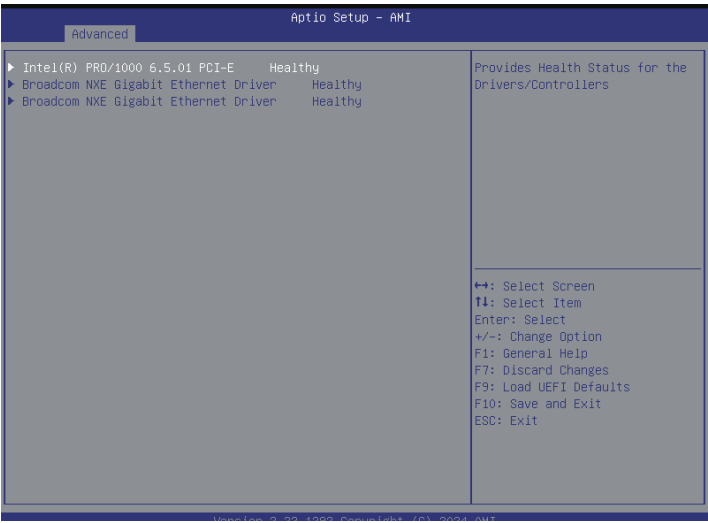

Inter (R) PRO/1000 6.5.01 PCI-E	Healthy (for SIENAD8UD-2L2Q only)
Provides Health Status for the Drivers/Controllers	
Broadcom NXE Gigabit Ethernet Driver	Healthy
Provides Health Status for the Drivers/Controllers.	

### 3.3.16 Tls Auth Configuration



#### Server CA Configuration

Press <Enter> to configure Server CA.

#### Client Cert Configuration

##### **Enroll Cert**

Press <Enter> to enroll cert.


##### **Delete Cert**

Press <Enter> to delete cert.

### 3.3.17 Instant Flash

Instant Flash is a UEFI flash utility embedded in Flash ROM. This convenient UEFI updatetool allows user to update system UEFI without entering operating systems first like MSDOS or Windows®. Just save the new UEFI file to the USB flash drive, floppy disk or hard drive and launch this tool, then update the UEFI only in a few clicks without preparing an additional floppy diskette or other complicated flash utility. Please be noted that the USB flash drive or hard drive must use FAT32/16/12 file system. Execute the Instant Flash utility, the utility will show the UEFI files and the respective information. Select the proper UEFI file to update UEFI, and reboot the system after the UEFI update process is completed.

### 3.4 Server Mgmt

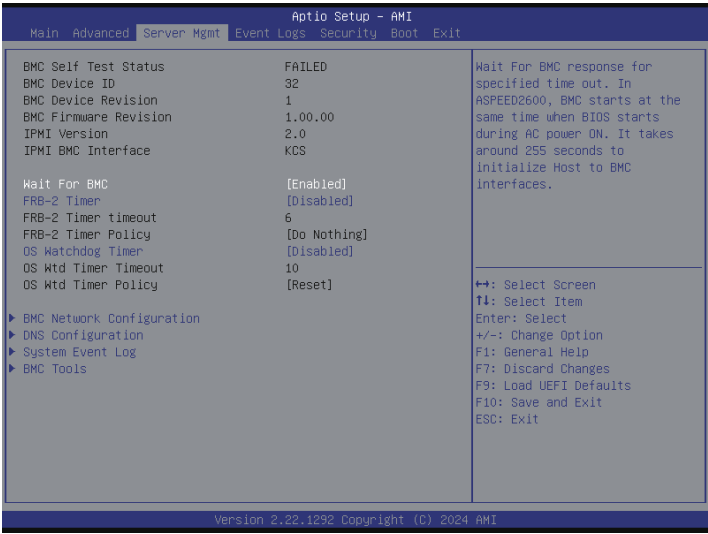

#### Wait For BMC

Wait For BMC response for specified time out. BMC starts at the same time when BIOS starts during AC power ON. It takes around 255 seconds to initialize Host to BMC interfaces.

#### FRB-2 Timer

Use this item to enable or disable FRB-2 timer (POST timer)

#### FRB-2 Timer Timeout

Use this to define the FRB-2 Time Expiration between 1 to 30 value.

#### FRB-2 Timer Policy

Configure how the system should respond. If the FRB-2 Timer expires is disabled, this item is not available.

#### OS Watchdog Timer

Use this item to enable or disable OS Watchdog Timer. If enabled, starts a BIOS timer which can only be shut off by Management Software after the OS loads.

#### OS Wtd Timer Timeout

Configure the OS Boot Watchdog Timer Expiration between 1 to 30 min value. If the OS Boot Watchdog Timer is disabled, this item is not available.

## OS Wtd Timer Policy

Configure how the system should respond if the OS Boot Watchdog Timer expires. If the OS Boot Watchdog Timer is disabled, this item is not available.

## BMC Network Configuration

Use this to configure BMC network parameters.

## DNS Configuration

Use this to configure DNS parameters.

## System Event Log


Press <Enter> to change the SEL event log configuration.

## BMC Tools

Use this item to configure about KCS control, restore AC power loss and load BMC default settings.



### 3.4.1 BMC Network Configuration

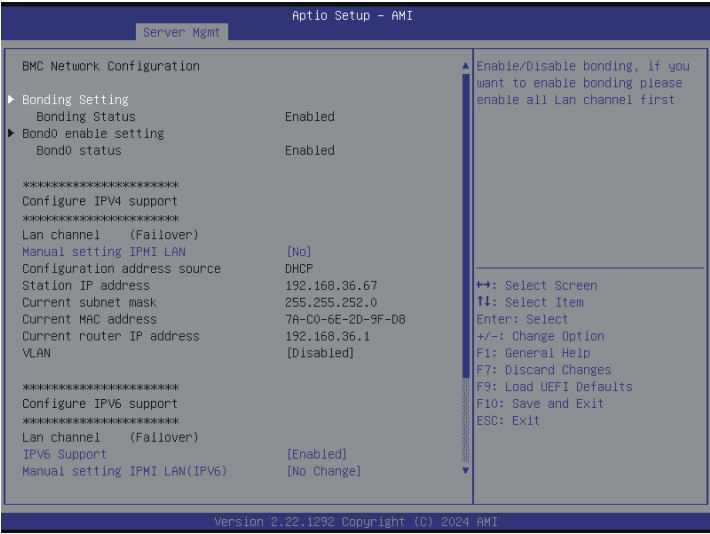

#### Bonding Setting

Select this item to enabled or disabled bonding. Please enable all lan channel first when want to enable bonding.

#### Manual Setting IPMI LAN

If [No] is selected, the IP address is assigned by DHCP. If using a static IP address, toggle to [Yes], and the changes take effect after the system reboots. The default value is [No].

#### Configuration Address Source

Select to configure BMC network parameters statically or dynamically(by BIOS or BMC). Configuration options: [Static] and [DHCP].

**Static:** Manually enter the IP Address, Subnet Mask and Gateway Address in the BIOS for BMC LAN channel configuration.

**DHCP:** IP address, Subnet Mask and Gateway Address are automatically assigned by the network's DHCP server.



*The default login information for the IPMI web interface is:*

*Username: admin*

*Password: admin*

*For more instructions on how to set up remote control environment and use the IPMI management platform, please refer to the IPMI Configuration User Guide or go to the Support website at: <http://www.asrockrack.com/support/faq.asp>*

## VLAN

Enable or disable Virtual Local Area Network.

If [Enabled] is selected, configure the items below.

**VLAN ID:** Select this item to configure the VLAN ID setting, the Maximum value is 4094 and the Minimum value is 1.

**VLAN Priority:** Select this item to configure the VLAN Priority setting, the Maximum value is 7 and the Minimum value is 0.

## IPv6 Support


Enable or disable LAN IPv6 Support.

## Manual Setting IPMI LAN(IPV6)

Select to configure LAN channel parameters statically or dynamically(by BIOS or BMC).

Unspecified option will not modify any BMC network parameters during BIOS phase.

### 3.4.2 DNS Configuration

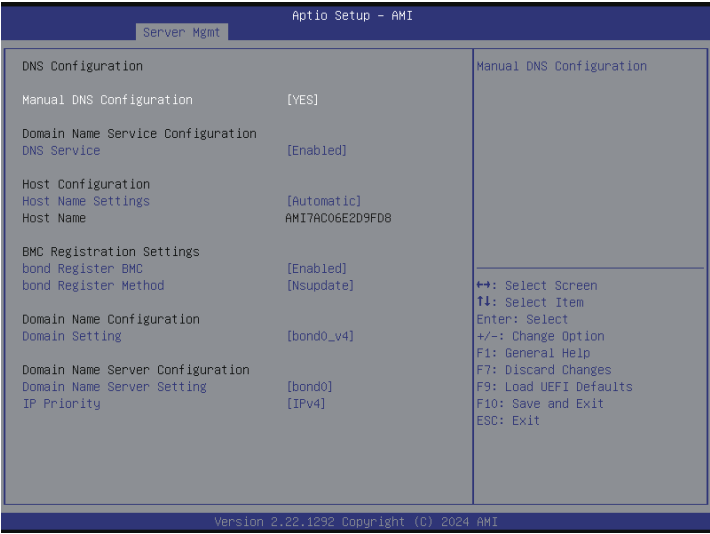

#### Manual DNS Configuration

Select this item to manual configure DNS.

If [YES] is selected, configure the items below.

#### DNS Service

Select this item to enable or disable DNS Service Configuration.

#### Host Name Settings

Select this item to automatic or manual Host Name Settings.

#### Bond Register BMC

Select this item to enable or disable Bond Register BMC.

#### Bond Register Method

Select this item to configure Bond Register Method with Nsupdate or DHCP client FQDN/Hostname.

#### Domain Setting

This item supports Manual, Bond0\_v4 and Bond0\_v6 Domain Settings.

---

## Domain Name Server Setting

Select this item to configure DNS Server Settings.

## IP Priority

Select this item to configure IP Priority.

### 3.4.3 System Event Log



#### SEL Components

Change this to enable or disable event logging for error/progress codes during boot.

#### Erase SEL

Use this to choose options for erasing SEL.

#### When SEL is Full

Use this to choose options for reactions to a full SEL.


#### Log EFI Status Codes

Use this item to disable the logging of EFI Status Codes or log only error code or only progress code or both.

#### PCIe Device Degrade ELog Support

Use this item to enable or disable PCIe Device Degrade Error Logging Support.

### 3.4.4 BMC Tools

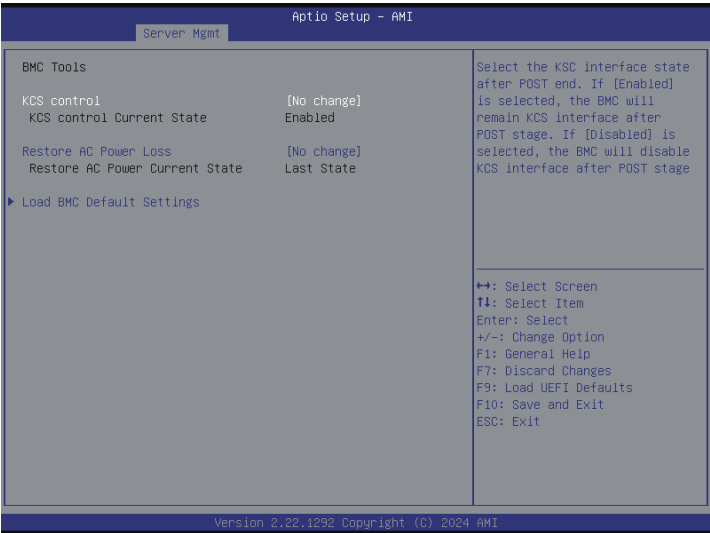

#### KCS Control

Select this KCS interface state after POST end. If [Enabled] is selected, the BMC will remain KCS interface after POST stage. If [Disabled] is selected, the BMC will disable KCS interface after POST stage

#### Restore AC Power Loss

This allows user to set the power state after an unexpected AC/power loss. If [Power Off] is selected, the AC/power remains off when the power recovers. If [Power On] is selected, the AC/power resumes and the system starts to boot up when the power recovers. If [Last State] is selected, it will recover to the state before AC/power loss.

#### Load BMC Default Settings

Use this item to Load BMC Default Settings

### 3.5 Event Logs



#### Change Smbios Event Log Settings

Use this item to configure the Smbios Event Log Settings.  
When entering the item, the screen displays following sub-items:

##### Smbios Event Log

Use this item to enable or disable all features of the SMBIOS Event Logging during system boot.

##### Erase Event Log

Choose options for erasing Smbios Event Log. Erasing is done prior to any logging activation during reset.

##### When Log is Full

Use this item to choose options for reactions to a full Smbios Event Log. The options include [Do Nothing] and [Erase Immediately].

##### Log System Boot Event

Choose option to enable/disable logging of System boot event.

#### View Smbios Event Log


Press <Enter> to view the Smbios Event Log records.



*All values changed here do not take effect until computer is restarted.*

### 3.6 Security

This section allows user to set or change the supervisor/user password for the system. For the user password item is allowed user to clear it.

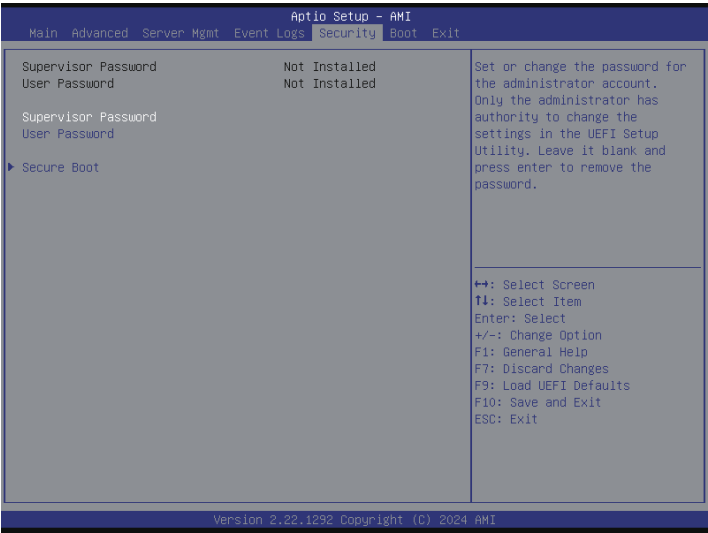

#### Supervisor Password

Set or change the password for the administrator account. Only the administrator has authority to change the settings in the UEFI Setup Utility. Leave it blank and press enter to remove the password.

#### User Password

Set or change the password for the user account. Users are unable to change the settings in the UEFI Setup Utility. Leave it blank and press enter to remove the password.

#### Secure Boot

Secure Boot feature is Active if Secure Boot is Enabled, Platform Key(PK) is enrolled and the System is in User mode. The mode change requires platform reset.


#### Secure Boot Mode

Secure Boot mode selector: Standard/Custom. In Custom mode Secure Boot Variables can be configured without authentication.



### 3.6.1 Key Management

In this section, expert users can modify Secure Boot Policy variables without full authentication.

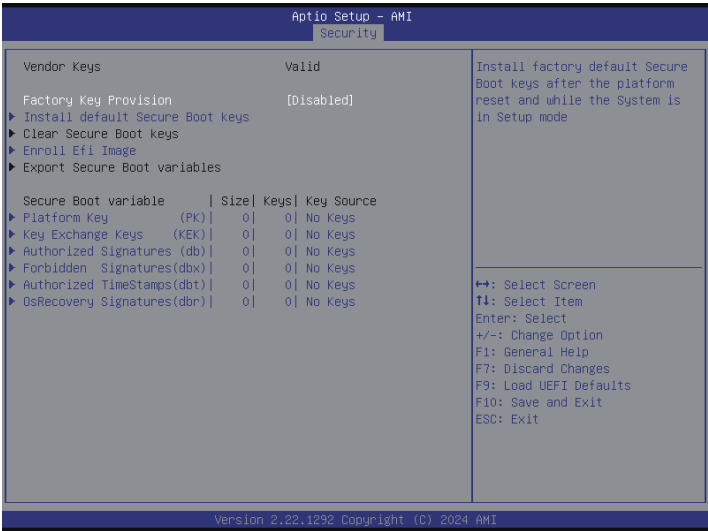

#### Factory Key Provision

Install factory default Secure Boot keys after the platform reset and while the System is in Setup mode.

#### Install Default Secure Boot Keys

Please install default secure boot keys if it's the first time to use secure boot.

#### Clear Secure Boot Keys

This force system to setup Mode-Clear all Secure Boot Variables. Change takes effect after reboot.

#### Enroll Efi Image

Allow the image to run in Secure Boot mode. Enroll SHA256 hash of the binary into Authorized Signature Database (db).

#### Export Secure Boot Variables

Copy NVRAM content of Secure Boot variables to files in a root folder on a file system device.

## Platform Key (PK)

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

- a) EFI\_SIGNATURE\_LIST
- b) EFI\_CERT\_X509 (DER)
- c) EFI\_CERT\_RSA2048 (bin)
- d) EFI\_CERT\_SHAXXX

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Factory, Modified, Mixed

## Key Exchange Keys (KEK)

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

- a) EFI\_SIGNATURE\_LIST
- b) EFI\_CERT\_X509 (DER)
- c) EFI\_CERT\_RSA2048 (bin)
- d) EFI\_CERT\_SHAXXX

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Factory, Modified, Mixed

## Authorized Signatures (db)

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

- a) EFI\_SIGNATURE\_LIST
- b) EFI\_CERT\_X509 (DER)
- c) EFI\_CERT\_RSA2048 (bin)
- d) EFI\_CERT\_SHAXXX

## 2. Authenticated UEFI Variable

### 3. EFI PE/COFF Image(SHA256)

Key Source: Factory, Modified, Mixed

## Forbidden Signatures (dbx)

Enroll Factory Defaults or load certificates from a file:

### 1. Public Key Certificate in:

- a) EFI\_SIGNATURE\_LIST
- b) EFI\_CERT\_X509 (DER)
- c) EFI\_CERT\_RSA2048 (bin)
- d) EFI\_CERT\_SHAXXX

## 2. Authenticated UEFI Variable

### 3. EFI PE/COFF Image(SHA256)

Key Source: Factory, Modified, Mixed

## Authorized TimeStamps (dbt)

Enroll Factory Defaults or load certificates from a file:

### 1. Public Key Certificate in:

- a) EFI\_SIGNATURE\_LIST
- b) EFI\_CERT\_X509 (DER)
- c) EFI\_CERT\_RSA2048 (bin)
- d) EFI\_CERT\_SHAXXX

## 2. Authenticated UEFI Variable

### 3. EFI PE/COFF Image(SHA256)

Key Source: Factory, Modified, Mixed

## OsRecovery Signatures (dbr)

Enroll Factory Defaults or load certificates from a file:

### 1. Public Key Certificate in:

- a) EFI\_SIGNATURE\_LIST

b) EFI\_CERT\_X509 (DER)

c) EFI\_CERT\_RSA2048 (bin)

d) EFI\_CERT\_SHAXXX


2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Factory, Modified, Mixed

### 3.7 Boot Screen

In this section, it will display the available devices on the system for user to configure the boot settings and the boot priority.

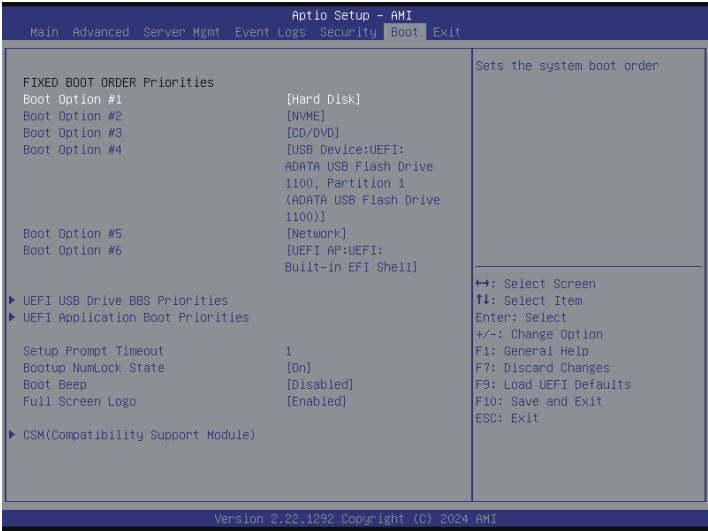

#### Boot Option #1/#2/#3/#4/#5/#6

Use this to set the system boot order.

#### UEFI USB Drive BBS Priorities

Specifies the Boot Device Priority sequence from available UEFI USB Drives.

#### UEFI Application Boot Priorities

Specifies the Boot Device Priority sequence from available UEFI Application.

#### Setup Prompt Timeout

Configure the number of seconds to wait for the UEFI setup utility.

#### Bootup NumLock State

Select whether Num Lock should be turned on or off when the system boots up.

#### Boot Beep


Select whether the Boot Beep should be turned on or off when the system boots up. Please note that a buzzer is needed.

---

## Full Screen Logo

Enable to display the boot logo or disable to show normal POST message.

### 3.7.1 CSM Parameters

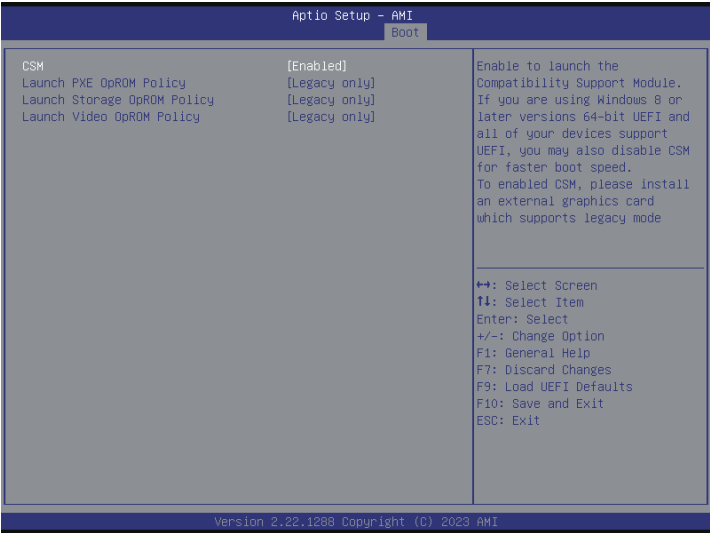

#### CSM (Compatibility Support Module)

##### CSM Support

Select this item to enable or disable the Compatibility Support Module. Please do not disable unless running a WHCK test. For faster boot speed, it may also disable CSM. To enabled CSM, please install an external graphics card which supports legacy mode.

##### Launch PXE OpROM Policy

Select UEFI only to run those that support UEFI option ROM only. Select Legacy only to run those that support legacy option ROM only. Select Do not launch to not execute both legacy and UEFI option ROM.


##### Launch Storage OpROM Policy

Select UEFI only to run those that support UEFI option ROM only. Select Legacy only to run those that support legacy option ROM only. Select Do not launch to not execute both legacy and UEFI option ROM.

##### Launch Video OpROM Policy

Select UEFI only to run those that support UEFI option ROM only. Select Legacy only to run those that support legacy option ROM only. Select Do not launch to not execute both legacy and UEFI option ROM.

### 3.8 Exit Screen

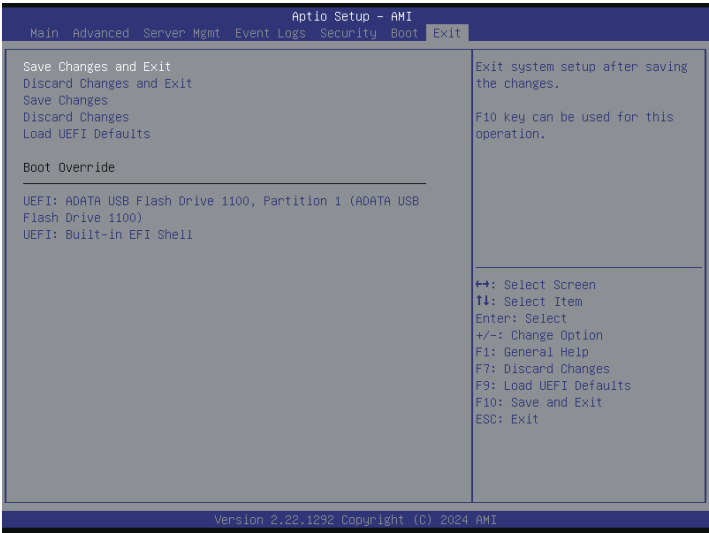

#### Save Changes and Exit

When selecting this option, the following message “Save configuration changes and exit setup?” will pop-out. Press <F10> key or select [Yes] to save the changes and exit the UEFI SETUP UTILITY.

#### Discard Changes and Exit

When selecting this option, the following message “Discard changes and exit setup?” will pop-out. Press <ESC> key or select [Yes] to exit the UEFI SETUP UTILITY without saving any changes.

#### Save Changes

When selecting this option, the following message “Save changes?” will pop-out. Select [Yes] to save all changes.

#### Discard Changes

When selecting this option, the following message “Discard changes?” will pop-out. Select [Yes] to discard all changes.

#### Load UEFI Defaults

Use this item to restore or load default values for all the setup options.



## Chapter 4 Software Support

After all the hardware has been installed, it suggests to go to the official website at <http://www.ASRockRack.com> and make sure if there are any new updates of the BIOS / BMC firmware for the motherboard.

### 4.1 Download and Install Operating System

This motherboard supports various Microsoft® Windows® Server / Linux compliant operating systems. Please download the operating system from the OS manufacturer. Please refer to the OS documentation for more instructions.

### 4.2 Download and Install Software Drivers

This motherboard supports various Microsoft® Windows® compliant drivers. Please download the required drivers from the website at <http://www.ASRockRack.com>.

To download necessary drivers, go to the product page, click on the "Download" tab, choose the operating system that is used, and then download the using driver.

### 4.3 Contact Information

Contact ASRock Rack or want to know more about ASRock Rack, welcome to visit ASRock Rack's website at <http://www.ASRockRack.com>; or contact the dealer for further information.

# Chapter 5 Troubleshooting

## 5.1 Troubleshooting Procedures

Follow the procedures below to troubleshoot the system.



*Always unplug the power cord before adding, removing or changing any hardware components. Failure to do so may cause physical injuries and damages to motherboard components.*

1. Disconnect the power cable and check whether the PWR LED is off.
2. Unplug all cables, connectors and remove all add-on cards from the motherboard.  
Make sure that the jumpers are set to default settings.
3. Confirm that there are no short circuits between the motherboard and the chassis.
4. Install a CPU and fan on the motherboard, then connect the chassis speaker and power LED.

### **If there is no power...**

1. Confirm that there are no short circuits between the motherboard and the chassis.
2. Make sure that the jumpers are set to default settings.
3. Check the settings of the 115V/230V switch on the power supply.
4. Verify if the battery on the motherboard provides ~3VDC. Install a new battery if it does not.

### **If there is no video...**

1. Try replugging the monitor cables and power cord.
2. Check for memory errors.

### **If there are memory errors...**

1. Verify that the DIMM modules are properly seated in the slots.
2. Use recommended DDR5 RDIMM
3. Install more than one DIMM modules that should be identical with the same brand, speed, size and chip-type.
4. Try inserting different DIMM modules into different slots to identify faulty ones.
5. Check the settings of the 115V/230V switch on the power supply.

**Unable to save system setup configurations...**

1. Verify if the battery on the motherboard provides ~3VDC. Install a new battery if it does not.
2. Confirm whether the power supply provides adequate and stable power.

**Other problems...**

1. Try searching keywords related to the related problem on ASRock Rack's FAQ page:  
<http://www.asrockrack.com/support>

## 5.2 Technical Support Procedures

If the problems are still unsolved, please contact ASRock Rack's technical support with the following information:

1. Contact information
2. Model name, BIOS version and problem type.
3. System configuration.
4. Problem description.

Contact ASRock Rack's technical support at:  
<http://www.asrockrack.com/support/tsd.asp>

## 5.3 Returning Merchandise for Service

For warranty service, the receipt or a copy of the invoice marked with the date of purchase is required. By calling the vendor or going to RMA website (<http://event.asrockrack.com/tsd.asp>) to obtain a Returned Merchandise Authorization (RMA) number.

The RMA number should be displayed on the outside of the shipping carton which is mailed prepaid or hand-carried when returning the motherboard to the manufacturer. Shipping and handling charges will be applied for all orders that must be mailed when service is complete.

This warranty does not cover damages incurred in shipping or from failure due to alteration, misuse, abuse or improper maintenance of products.

Contact the distributor first for any product related problems during the warranty period.

## Contact Information

If it needs to contact ASRock Rack or want to know more about ASRock Rack, you're welcome to visit ASRock Rack's website at <http://www.asrockrack.com>; or contact the dealer for further information. For technical questions, please submit a support request form at <https://event.asrockrack.com/tsd.asp>

### **ASRock Rack Incorporation**

e-mail: [ASRockRack\\_sales@asrockrack.com](mailto:ASRockRack_sales@asrockrack.com)

### **ASRock Rack EUROPE B.V.**

Bijsterhuizen 11-11

6546 AR Nijmegen

The Netherlands

Phone: +31-24-345-44-33

### **ASRock Rack America, Inc.**

13848 Magnolia Ave, Chino, CA91710 U.S.A.

Phone: +1-909-590-8308

Fax: +1-909-590-1026