

**Teardown Instruction** 

# **Teardown Instruction**

# **LCD Monitor**

# E2223HN/HNf



## Service Manual Versions and Revision

No.	Version	Release Date	Revision
1	1.0	2022/01/26	Initial Release



S1

S2

# **Chapter 1-TEARDOWN INSTRUCTION**

S4

S5

- 1. Remove Rear Cover Screw and Stand Screws
- a. Remove screws "1~6" on rear cover with electric screwdriver
- b. Torque: 12.0 +/- 0.5Kgf/cm, Phillips screwdriver



- 4. Remove VGA screw
- a. Remove screws "1~2" with electric screwdriver






- 2. Remove Rear Cover
- Pry off the back cover of the machine with the aid of the dismantling fixture, in the sequence of "Bottom->Left/Right->Top"



- 5. Remove Chassis Screw
- Remove screws "1~2" with electric screwdriver
- b. Torque: 3.5 +/- 0.5Kgf/cm, Phillips screwdriver

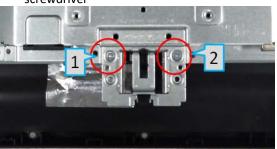


- b. Remove Light Bar and Keypad Cable:
- Remove acetate cloth tape marked with "1", then remove light bar (grasp on Pin then pull outwards to remove)
- b. Remove Keypad cable "2"



- S6
- 6. Remove Aluminium Foil and LVDS Cable
- a. Remove aluminium tape then remove LVDS cable (Pinch on clips on the sides)



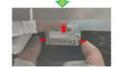


S3




S7


- 7. Remove PCBA 1
- a. Remove mylar (squared in red in the upper picture)
- Remove grounding screw "1" then locking screws marked "2~5" with electric screwdriver
- c. Torque: 5.5 +/- 0.5Kgf/cm, Phillips screwdriver

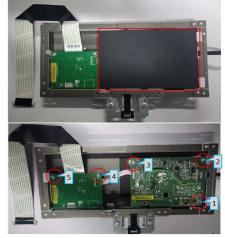

- 8. Remove PCBA 2
- a. Remove PI board and IF board

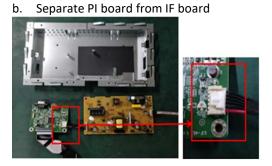

- 9. Remove LVDS Cable and Light Bara a. Remove light bar from PI board (gras
  - Remove light bar from PI board (grasp on Pin then pull upwards to remove)
- Remove LVDS cable from IF board (lift cover before remove)

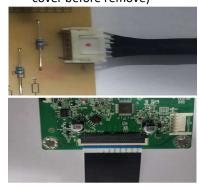

S10

10.

- Remove Keypad
- a. Remove keypad from front cover (loosen hook circled in red first)



- Remove Components on PI Board 1
  Remove electrolyte capacitor >25mm height
  - (squared in red) from printed circuit boards
- b. Cut the glue between bulk cap and PCBA with knife – ensure cutting path within the glue, don't touch bulk cap and PCBA



- Remove Components on PI Board 2
  Take out the capacitor pin solder with
- soldering iron b. Lift the bulk capacitor away from power board



S8

S9

S11

S12

## Teardown Instruction



#### 1. Product Material Information

The following substances, preparation, or components should be disposed of or recovered separately from other WEEE in compliance with Article 4 of EU Council Directive 75/422/EEC.

Capacitors / Condensers (containing PCB/PCT)	Not used	
Mercury containing components	Not used	
Batteries	Not used	
Printed circuit boards (with surface greater than 10 square cm)	Product has printed circuit boards (with surface greater than 10 square cm)	
Component contain toner, ink and liquids	Not used	
Plastic containing BFR		
Component and waste contain asbestos	Not used	
CRT	Not used	
Component contain CFC, HCFC, HGC and HC	Not used	
Gas discharge lamps	Not use	
LCD display > 100 cm2	Product LCD greater than 100cm2	
External electric cable	Product has external cables	
Component contain refractory ceramic fibers	Not used	
Component contains radio-active substances	Not used	
Electrolyte capacitors (height > 25mm, diameter >25mm)	Product has electrolyte capacitors (height > 25mm)	

#### 2. Tools Required

List the type and size of the tools that would typically can be used to disassemble the product to a point where components and materials requiring selective treatment can be removed.

Tool Description:

- Screwdriver (Philip head with Φ5 mm & Φ3 mm)
- Screwdriver (Hexagonal to remove VGA connectivity)
- Soldering iron
- Knife